


## Quick Start Guide

### UNITUNE CLIP

Clip-On Tuner with Strobe and Chromatic Modes and 108 LED Matrix Display for Uncompromised Tuning Quality

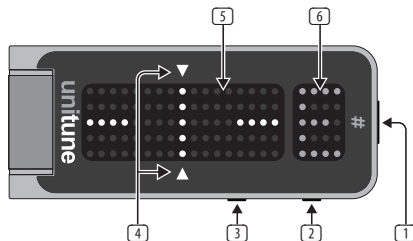


- 1 **POWER** button turns Unitune Clip on and off. Unitune Clip turns off automatically after 5 minutes.
- 2 **REFERENCE TONE** button can be used to adjust the reference pitch used for tuning up or down from the default setting (A = 440 Hz). See "Changing the Reference Pitch" for instructions.
- 3 **DISPLAY MODE** button toggles between Needle and Strobe tuning modes.
- 4 **ADAPTIVE DISPLAY ORIENTATION INDICATORS** show the current display direction. The display will automatically flip to stay oriented for viewing at all times.
- 5 **MAIN DISPLAY** shows the individual pitch of the currently-tuned string in Needle/Strobe Tuning Mode.
- 6 **SECONDARY DISPLAY** shows the detected note name for the currently-tuned string.

Visit [tcelectronic.com](http://tcelectronic.com) to download the full manual

#### Needle Mode

In Needle Mode, a single string's pitch is indicated by a column of five LEDs in the MAIN DISPLAY, and the target pitch's name appears in the SECONDARY DISPLAY.

Tune the string until the column of LEDs are centered and "on target" (left = flat; right = sharp).

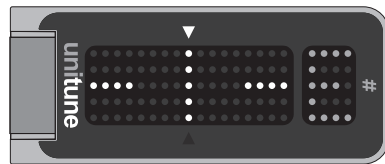

#### Strobe Mode

In Strobe Mode, a single string's pitch has two indicators:

- Red LEDs to the left (flat) or right (sharp) of the center LED column
- "Rotating" segments in the display

Tune the string until the rotating segments slow down and stop, and only the center column of LEDs lights up.

#### Changing Reference Pitch

The default reference pitch (A = 440 Hz) can be changed by following these steps:

1. Press REFERENCE TONE button. The display will show the current reference pitch (e.g., "440" for 440 Hz).
2. To increase the reference pitch in 1 Hz steps, press the REFERENCE TONE button.
3. To decrease the reference pitch in 1 Hz steps, press the DISPLAY MODE button.
4. To store the currently-displayed reference pitch, refrain from pressing either button for 2 seconds. The set reference pitch will blink 3 times.

## Specifications

Type	Chromatic strobe tuner, clip-on
Tuning range	A0 (27.5 Hz) to C8 (4186 Hz)
Tuning accuracy	Chromatic tuning mode: $\pm 0.5$ cent Strobe tuning mode: $\pm 0.02$ cent
Reference pitch	A4 = 435 to 445 Hz, adjustable in 1 Hz steps
Battery	CR2032 Li-Mn battery (included)
Dimensions	28 x 25 x 60 mm (1.1 x .98 x 2.36")
Weight	32 g (1.13 oz), including battery

## LEGAL DISCLAIMER

Music Tribe accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances and other information are subject to change without notice. All trademarks are the property of their respective owners. Midas, Klark Teknik, Lab Gruppen, Lake, Tannoy, Turbosound, TC Electronic, TC Helicon, Behringer, Bugera, Aurotone and Coolaudio are trademarks or registered trademarks of Music Tribe Global Brands Ltd. © Music Tribe Global Brands Ltd. 2019 All rights reserved.

## LIMITED WARRANTY

For the applicable warranty terms and conditions and additional information regarding Music Tribe's Limited Warranty, please see complete details online at [musictribe.com/warranty](https://musictribe.com/warranty).

## Zhongshan Eurotec Electronics Limited

No. 10 Wanmei Road, South China Modern Chinese Medicine Park, Nanlang Town, 528451, Zhongshan City, Guangdong Province, China



### WARNING – Coin/Button Cell Battery

- DO NOT INGEST BATTERY! CHEMICAL BURN HAZARD!**
- This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed and placed inside any part of the body, seek immediate medical attention.
- CAUTION: Danger of explosion if battery is incorrectly replaced! Replace only with the same or equivalent type!**



### AVERTISSEMENT - Pile bouton / pile

- NE PAS INGÉRER LA BATTERIE! DANGER DE BRÛLURE CHIMIQUE!**
- Ce produit contient une pile bouton / pièce. En cas d'ingestion de la pile bouton, elle peut provoquer de graves brûlures internes en seulement 2 heures et entraîner la mort.
- Gardez les piles neuves et usagées hors de la portée des enfants. Si le compartiment de la batterie ne se ferme pas correctement, arrêtez d'utiliser le produit et éloignez-le des enfants.
- Si vous pensez que les piles ont pu être avalées et placées dans n'importe quelle partie du corps, consultez immédiatement un médecin.
- ATTENTION: Danger d'explosion si la batterie est remplacée de manière incorrecte! Remplacez uniquement par le même type ou un type équivalent!**



**WARNING:** Depending on various factors such as age-related changes or the surface finish, there is a possibility that your instrument's coating may be damaged by attaching this product. In general, do not leave accessories such as Unitune Clip attached to your guitar longer than necessary, as the rubber pad may adversely affect the finish of your instrument, especially when it is exposed to sunlight for extended periods of time.

## FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION SUPPLIER'S DECLARATION OF CONFORMITY (SDoC)



Responsible Party Name: Music Tribe Commercial NV Inc.

Address: 5270 Procyon Street  
Las Vegas, NV 89118

Phone Number: +1 702 800 8290

## UNITUNE CLIP

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Music Tribe Brands UK Ltd.,**  
Quay House, City Park Business Village, 5 Brindley Road, Manchester,  
Old Trafford, M16 9UN, United Kingdom