



DIGITAL KEYBOARD

PSR-**E263**

YPT-260

Setting Up

Reference

Appendix

Before using the instrument, be sure to read
"PRECAUTIONS" on pages 5–7.

Owner's Manual

EN

SPECIAL MESSAGE SECTION

This product utilizes batteries or an external power supply (adapter). DO NOT connect this product to any power supply or adapter other than one described in the manual, on the name plate, or specifically recommended by Yamaha.

WARNING: Do not place this product in a position where anyone could walk on, trip over, or roll anything over power or connecting cords of any kind. The use of an extension cord is not recommended! If you must use an extension cord, the minimum wire size for a 25' cord (or less) is 18 AWG. NOTE: The smaller the AWG number, the larger the current handling capacity. For longer extension cords, consult a local electrician.

This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by Yamaha. If a cart, etc., is used, please observe all safety markings and instructions that accompany the accessory product.

SPECIFICATIONS SUBJECT TO CHANGE:

The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. DO NOT operate for long periods of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.

IMPORTANT: The louder the sound, the shorter the time period before damage occurs.

Some Yamaha products may have benches and / or accessory mounting fixtures that are either supplied with the product or as optional accessories. Some of these items are designed to be dealer assembled or installed. Please make sure that benches are stable and any optional fixtures (where applicable) are well secured BEFORE using.

Benches supplied by Yamaha are designed for seating only. No other uses are recommended.

NOTICE:

Service charges incurred due to a lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer's warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

ENVIRONMENTAL ISSUES:

Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:

Battery Notice:

This product MAY contain a small non-rechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

This product may also use "household" type batteries. Some of these may be rechargeable. Make sure that the battery being charged is a rechargeable type and that the charger is intended for the battery being charged.

When installing batteries, never mix old batteries with new ones, and never mix different types of batteries. Batteries MUST be installed correctly. Mismatches or incorrect installation may result in overheating and battery case rupture.

Warning:

Do not attempt to disassemble, or incinerate any battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by the laws in your area. Note: Check with any retailer of household type batteries in your area for battery disposal information.

Disposal Notice:

Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc. If your dealer is unable to assist you, please contact Yamaha directly.

NAME PLATE LOCATION:

The name plate is located on the bottom of the product. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

Model

Serial No.

Purchase Date

PLEASE KEEP THIS MANUAL

FCC INFORMATION (U.S.A.)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee

that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to co-axial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA90620

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

* This applies only to products distributed by YAMAHA CORPORATION OF AMERICA.

(class B)

For AC adaptor

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3(B)

- This applies only to products distributed by Yamaha Canada Music Ltd.
- Ceci ne s'applique qu'aux produits distribués par Yamaha Canada Musique Ltée. (can_b_01)



Explanation of Graphical Symbols



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

(UL60065_03)

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe and handy place for future reference.

For AC adaptor



WARNING

- This AC adaptor is designed for use with only Yamaha electronic instruments. Do not use for any other purpose.
- Indoor use only. Do not use in any wet environments.



CAUTION

- When setting up, make sure that the AC outlet is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch of the instrument and disconnect the AC adaptor from the outlet. When the AC adaptor is connected to the AC outlet, keep in mind that electricity is flowing at the minimum level, even if the power switch is turned off. When you are not using the instrument for a long time, make sure to unplug the power cord from the wall AC outlet.

For this instrument



WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/AC adaptor

- Do not place the power cord near heat sources such as heaters or radiators. Also, do not excessively bend or otherwise damage the cord, or place heavy objects on it.
- Only use the voltage specified as correct for the instrument. The required voltage is printed on the name plate of the instrument.
- Use the specified adaptor (page 44) only. Using the wrong adaptor can result in damage to the instrument or overheating.
- Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.

Do not open

- This instrument contains no user-serviceable parts. Do not open the instrument or attempt to disassemble or modify the internal components in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

Water warning

- Do not expose the instrument to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the instrument, turn off the power immediately and unplug the power cord from the AC outlet. Then have the instrument inspected by qualified Yamaha service personnel.
- Never insert or remove an electric plug with wet hands.

Fire warning

- Do not put burning items, such as candles, on the unit. A burning item may fall over and cause a fire.

Battery

- Follow the precautions below. Failure to do so might result in explosion, fire, overheating or battery fluid leakage.
 - Do not tamper with or disassemble batteries.
 - Do not dispose of batteries in fire.

- Do not attempt to recharge batteries that are not designed to be charged.
- Keep the batteries separate from metallic objects such as necklaces, hairpins, coins, and keys.
- Use the specified battery type (page 44) only.
- Use new batteries, all of which are the same type, same model, and made by the same manufacturer.
- Always make sure all batteries are inserted in conformity with the +/- polarity markings.
- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument.
- When using Ni-MH batteries, follow the instructions that came with the batteries. Use only the specified charger device when charging.
- Keep batteries away from small children who might accidentally swallow them.
- If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth, or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause loss of sight or chemical burns.

If you notice any abnormality

- When one of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet. (If you are using batteries, remove all batteries from the instrument.) Then have the device inspected by Yamaha service personnel.
 - The power cord or plug becomes frayed or damaged.
 - It emits unusual smells or smoke.
 - Some object has been dropped into the instrument.
 - There is a sudden loss of sound during use of the instrument.

CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the instrument or other property. These precautions include, but are not limited to, the following:

Power supply/AC adaptor

- Do not connect the instrument to an electrical outlet using a multiple-connector. Doing so can result in lower sound quality, or possibly cause overheating in the outlet.
- When removing the electric plug from the instrument or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.
- Remove the electric plug from the outlet when the instrument is not to be used for extended periods of time, or during electrical storms.

Location

- Do not place the instrument in an unstable position where it might accidentally fall over.
- Before moving the instrument, remove all connected cables, to prevent damage to the cables or injury to anyone who might trip over them.
- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, electricity is still flowing to the product at the minimum level. When you are not using the product for a long time, make sure to unplug the power cord from the wall AC outlet.

- Use only the stand specified for the instrument. When attaching it, use the provided screws only. Failure to do so could cause damage to the internal components or result in the instrument falling over.

Connections

- Before connecting the instrument to other electronic components, turn off the power for all components. Before turning the power on or off for all components, set all volume levels to minimum.
- Be sure to set the volumes of all components at their minimum levels and gradually raise the volume controls while playing the instrument to set the desired listening level.

Handling caution

- Do not insert a finger or hand in any gaps on the instrument.
- Never insert or drop paper, metallic, or other objects into the gaps on the panel or keyboard. This could cause physical injury to you or others, damage to the instrument or other property, or operational failure.
- Do not rest your weight on, or place heavy objects on the instrument, and do not use excessive force on the buttons, switches or connectors.
- Do not use the instrument/device or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the instrument, or data that is lost or destroyed.

Always turn the power off when the instrument is not in use.

Even when the [] (Standby/On) switch is in standby status (display is off), electricity is still flowing to the instrument at the minimum level.

When you are not using the instrument for a long time, make sure you unplug the power cord from the wall AC outlet.

Make sure to discard used batteries according to local regulations.

The model number, serial number, power requirements, etc., may be found on or near the name plate, which is at the bottom of the unit. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase to aid identification in the event of theft.

Model No.

Serial No.

(bottom_en_01)

NOTICE

To avoid the possibility of malfunction/ damage to the product, damage to data, or damage to other property, follow the notices below.

■ Handling

- Do not use the instrument in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Otherwise, the instrument, TV, or radio may generate noise. When you use the instrument along with an application on your iPad, iPhone or iPod touch, we recommend that you set "Airplane Mode" to "ON" on that device in order to avoid noise caused by communication.
- Do not expose the instrument to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration, damage to the internal components or unstable operation. (Verified operating temperature range: 5° – 40°C, or 41° – 104°F.)
- Do not place vinyl, plastic or rubber objects on the instrument, since this might discolor the panel or keyboard.

■ Maintenance

- When cleaning the instrument, use a soft cloth. Do not use paint thinners, solvents, alcohol, cleaning fluids, or chemical-impregnated wiping cloths.

■ Saving data

- Some of the data of this instrument (page 33) are retained when the power is turned off. However, the saved data may be lost due to some failure, an operation mistake, etc.

Information

■ About copyrights

- Copying of the commercially available musical data including but not limited to MIDI data and/or audio data is strictly prohibited except for your personal use.
- This product incorporates and bundles contents in which Yamaha owns copyrights or with respect to which Yamaha has license to use others' copyrights. Due to copyright laws and other relevant laws, you are NOT allowed to distribute media in which these contents are saved or recorded and remain virtually the same or very similar to those in the product.
 - * The contents described above include a computer program, Accompaniment Style data, MIDI data, WAVE data, voice recording data, a score, score data, etc.
 - * You are allowed to distribute medium in which your performance or music production using these contents is recorded, and the permission of Yamaha Corporation is not required in such cases.

■ About functions/data bundled with the instrument

- Some of the preset songs have been edited for length or arrangement, and may not be exactly the same as the original.

■ About this manual

- The illustrations and LCD screens as shown in this manual are for instructional purposes only, and may appear somewhat different from those on your instrument.
- iPhone, iPad, iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.

Thank you for purchasing this Yamaha Digital Keyboard!

We recommend that you read this manual carefully so that you can fully take advantage of the advanced and convenient functions of the instrument.

We also recommend that you keep this manual in a safe and handy place for future reference.

About the Manuals

In addition to this Owner's Manual, the following online document (PDF file) is available.



Song Book (only in English, French, German and Spanish)

Contains music scores for the preset Songs (excluding the Demo Songs) of this instrument. After completing the user registration at the website below, you can download this Song Book free of charge.

Yamaha Online Member

<https://member.yamaha.com/myproduct/regist/>

You will need the PRODUCT ID on the sheet ("Online Member Product Registration") packaged with this manual in order to fill out the User Registration form.

Included Accessories

- Owner's Manual (this book)
- AC adaptor*¹
- Music rest
- Online Member Product Registration*²

*1: May not be included depending on your area. Check with your Yamaha dealer.

*2: The PRODUCT ID on the sheet will be needed when you fill out the User Registration form.

Contents

About the Manuals.....	8
Included Accessories.....	8

Setting Up

Panel Controls and Terminals	10
-------------------------------------	-----------

Setting Up	12
-------------------	-----------

Power Requirements.....	12
Turning the Power On.....	13
Setting the Auto Power Off function.....	13
Adjusting the Master Volume.....	14
Connecting Headphones or External Speaker ...	14
Using a Pedal (Sustain).....	14
Using the music rest.....	14

Display Items and Basic Operations	15
---	-----------

Display Items.....	15
Basic Operations.....	15

Reference

Playing a Variety of Instrument Voices	16
---	-----------

Selecting a Voice.....	16
Fun Sounds.....	16
Playing the “Grand Piano”.....	16
Using the Metronome.....	17
Playing with enhanced, more spacious sound (Ultra-Wide Stereo).....	17
Applying Effects to the Sound.....	17

Playing Styles	18
-----------------------	-----------

Style Variations—Sections.....	19
Changing the Tempo.....	19
Chord Types for Style Playback.....	20
Looking Up Chords Using the Chord Dictionary...	21

Playing the keyboard with two persons (Duo mode)	22
---	-----------

Playing Songs	23
----------------------	-----------

Listening to a Demo Song.....	23
Selecting and Playing Back a Song.....	23
BGM Playback.....	23
Song Fast Forward, Fast Reverse, and Pause...	24
Changing the Melody Voice.....	24
A-B Repeat.....	24
Turning Each Part On/Off.....	25

Hearing and Experiencing the Sound of the Chords (Chord Study)	26
---	-----------

Hear and experience a sound of a single chord ..	26
Hear and experience basic chord progressions ..	26

Using the Song Lesson Feature	27
--------------------------------------	-----------

Listening, Timing and Waiting.....	27
Practicing with Song Lesson.....	27

Playing an External Audio Device with the Built-in Speakers	28
--	-----------

Recording Your Performance (Phrase Recording)	29
--	-----------

Selecting an EQ Setting for the Best Sound	30
---	-----------

The Functions	31
----------------------	-----------

Backup and Initialization	33
----------------------------------	-----------

Backup Parameters.....	33
Initialization.....	33

Appendix

Troubleshooting	34
------------------------------	-----------

Voice List	35
-------------------------	-----------

Drum Kit List	38
----------------------------	-----------

Song List	41
------------------------	-----------

Style List	42
-------------------------	-----------


Effect Type List	43
-------------------------------	-----------

Specifications	44
-----------------------------	-----------



Index	45
--------------------	-----------

Panel Controls and Terminals

Front Panel

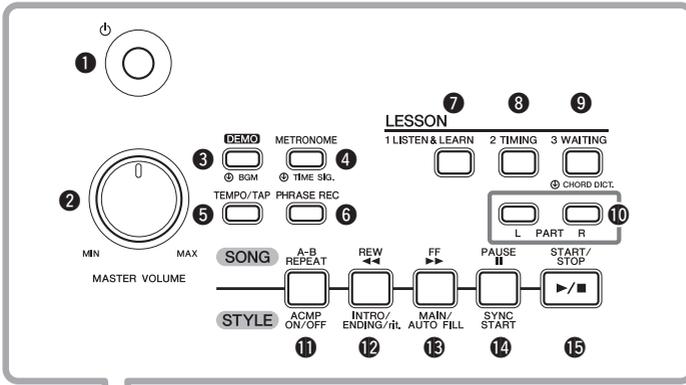

Song List (page 41) **Voice List** (page 35) **Display** (page 15) **Style List** (page 42)

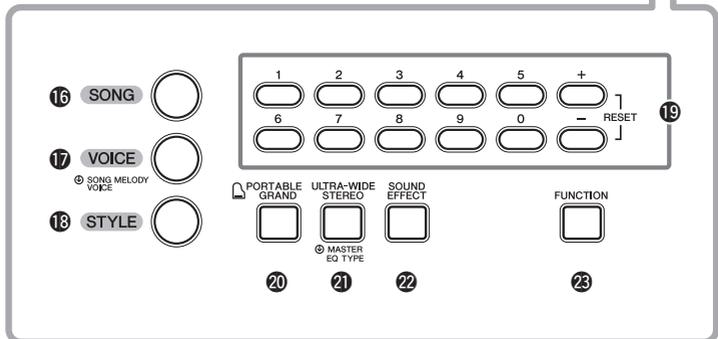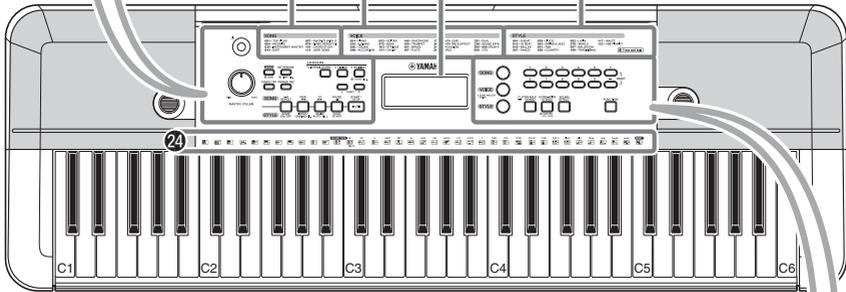

- ❶ [⏻] (Standby/On) switch page 13
- ❷ [MASTER VOLUME] dial page 14
- ❸ [DEMO] button page 23
- ❹ [METRONOME] button page 17
- ❺ [TEMPO/TAP] button page 19
- ❻ [PHRASE REC] button page 29
- ❼ [1 LISTEN & LEARN] button page 27
- ❽ [2 TIMING] button page 27
- ❾ [3 WAITING] button page 27
- ❿ **PART**
 - [L] button page 27
 - [R] button page 27

In the Song mode

- ❶ [A-B REPEAT] button page 24
- ❷ [REW] button page 24
- ❸ [FF] button page 24
- ❹ [PAUSE] button page 24

In the Style mode

- ❶ [ACMP ON/OFF] button page 18
- ❷ [INTRO/ENDING/rit.] button page 19
- ❸ [MAIN/AUTO FILL] button page 19
- ❹ [SYNC START] button page 18

- ❺ [START/STOP] button page 23
- ❻ [SONG] button page 23
- ❼ [VOICE] button page 16
- ❽ [STYLE] button page 18
- ❾ Number buttons [0]–[9], [+], [-] page 15
- ❿ [PORTABLE GRAND] button page 16
- ⓫ [ULTRA-WIDE STEREO] button page 17
- ⓬ [SOUND EFFECT] button page 16
- ⓭ [FUNCTION] button page 31
- ⓮ **Drum illustrations for the Drum Kit** page 16

Each of these indicates the drum or percussion instrument assigned to the corresponding key for "Standard Kit 1."


Keyboard

Since this keyboard does not have touch response, the level of the sound does not change in response to your playing strength. Therefore, your performance may not sound correctly as in the preset Songs.

The "Press & Hold" Symbol

 Buttons having this indication can be used to call up an alternate function when the relevant button is pressed and held. Hold down this button until the function is called up.

Rear Panel

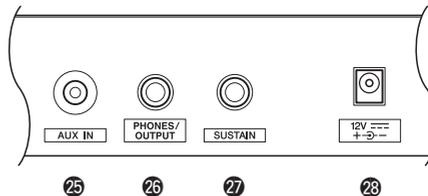


- ❶ [AUX IN] jack page 28
- ❷ [PHONES/OUTPUT] jack page 14
- ❸ [SUSTAIN] jack page 14
- ❹ DC IN jack page 12

Power Requirements

Although the instrument will run either from an AC adaptor or batteries, Yamaha recommends use of an AC adaptor whenever possible. An AC adaptor is more environmentally friendly than batteries and does not deplete resources.

Using an AC Adaptor

Connect the AC adaptor in the order shown in the illustration.

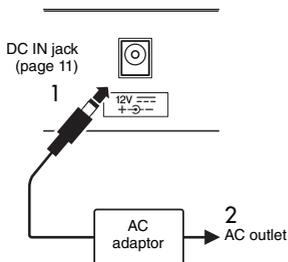


WARNING

- Use the specified AC adaptor (page 44) only. Using the wrong AC adaptor can result in damage to the instrument or overheating.

WARNING

- When using the AC adaptor with a removable plug, make sure to keep the plug attached to the AC adaptor. Using the plug alone can cause electric shock or fire.
- If the plug is accidentally removed from the AC adaptor, slide it back in until it clicks into place, taking care to avoid touching any internal metal parts. To avoid electric shock, short circuit or damage, also be careful that there is no dust between the AC adaptor and plug.

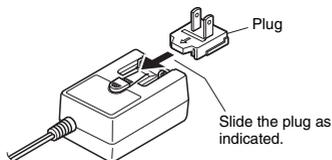

The shape of the plug differs depending on your area.

CAUTION

- When setting up the product, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn the power off and disconnect the plug from the outlet.

NOTE

- Follow the order shown above in reverse when disconnecting the AC adaptor.


Using Batteries

This instrument requires six "AA" size, Alkaline (LR6)/Manganese (R6) batteries, or rechargeable nickel-metal hydride batteries (rechargeable Ni-MH batteries). The Alkaline batteries or rechargeable Ni-MH batteries are recommended for this instrument, since other types may result in poorer battery performance.


WARNING

- When the batteries run out, or if the instrument is not to be used for a long time, remove the batteries from the instrument.

- Make sure that the power of the instrument is off.
- Open the battery compartment cover located on the instrument's bottom panel.

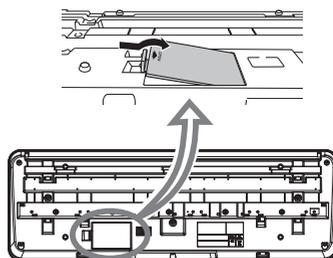

- Insert the six new batteries, being careful to follow the polarity markings on the inside of the compartment.

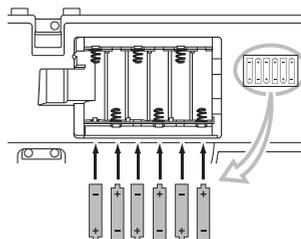

- Replace the compartment cover, making sure that it locks firmly in place.

NOTICE

- Connecting or disconnecting the power adaptor with batteries installed may turn the power off, resulting in loss of data being recorded at the time.
- Make sure to set the battery type correctly (page 13).
- When battery power becomes too low for proper operation, the volume may be reduced, the sound may be distorted, and other problems may occur. When this happens, make sure to replace all batteries with new ones or already recharged ones.

NOTE

- This instrument cannot charge the batteries. Use only the specified charger device when charging.
- Power will be automatically drawn from the AC adaptor if an AC adaptor is connected while batteries are installed in the instrument.

■ Setting the battery type


Depending on the battery type to be used, you may need to change the battery type setting on this instrument. Alkaline (and manganese) batteries are chosen by default. After installing new batteries and turning the power on, make sure to set the Battery Type appropriately (rechargeable or not) via Function number 022 (page 32).

NOTICE

- Failure to set the battery type may shorten the amount of the battery life. Make sure to set the battery type correctly.

Turning the Power On

- 1 Turn down the [MASTER VOLUME] dial to "MIN".

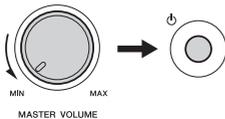

- 2 Press the [⏻] (Standby/On) switch to turn the power on. The Voice name appears on the display. Adjust the volume as desired while playing the keyboard.
- 3 Press and hold the [⏻] (Standby/On) switch for about a second to set the instrument to standby mode.

⚠ CAUTION

- Even when the [⏻] (Standby/On) switch is in standby status, electricity is still flowing to the product at the minimum level. Remove the electric plug from the outlet when the instrument is not to be used for extended periods of time, or during electrical storms.

NOTICE

- Press only the [⏻] (Standby/On) switch when turning the power on. Any other operations such as pressing the pedal are not allowed. Doing so may cause the instrument to malfunction.

Setting the Auto Power Off function

To prevent unnecessary power consumption, this instrument features an Auto Power Off function that automatically turns the power off if the instrument is not operated for a specified period of time. The amount of time that elapses before the power is automatically turned off is 30 minutes by default; however, you can change the setting.

■ To set the time that elapses before Auto Power Off is executed:


Press the [FUNCTION] button several times until "AutoOff" (Function 021; page 32) appears, then use the [+] or [-] button to select the desired value.

Settings: OFF, 5, 10, 15, 30, 60, 120 (minutes)

Default value: 30 (minutes)

■ To disable the Auto Power Off function:

Turn the power on while holding down the lowest key on the keyboard. A message "oFF AutoOff" appears briefly, then the instrument starts up with the Auto Power Off function disabled. The Auto Power Off function also can be disabled by selecting Off in Function number 021 (page 32).

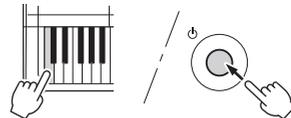**NOTICE**


- Depending on the instrument status, the power may not turn off automatically, even after the elapse of the specified period of time. Always turn off the power manually when the instrument is not in use.
- When the instrument is not operated for a specified period of time while connected to an external device such as an amplifier, speaker or computer, make sure to follow the instructions in the Owner's Manual to turn off the power to the instrument and the connected devices, in order to protect the devices from damage. If you do not want the power to turn off automatically when a device is connected, disable Auto Power Off.

NOTE

- Generally, the data and settings are maintained even when the power is turned off with the Auto Power Off function. For details, see page 33.

Adjusting the Master Volume


To adjust the volume of the entire keyboard sound, use the [MASTER VOLUME] dial while playing the keyboard.

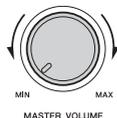

CAUTION

- Do not use the instrument for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss.

Connecting Headphones or External Speaker

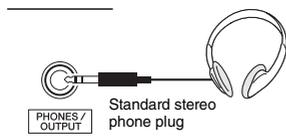

Connect a pair of headphones to the [PHONES/OUTPUT] jack. This jack also functions as an external output. By connecting to a computer, keyboard amplifier, recorder, or other audio device, you can output the audio signal of this instrument to that external device. The speakers of this instrument are automatically shut off when a plug is inserted into this jack.


CAUTION

- Do not use the instrument or headphones for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss.
- Before connecting the instrument to other electronic components, turn off the power of all the components. Also, before turning any components on or off, make sure to set all volume levels to minimum. Otherwise, damage to the components or electrical shock may occur.

NOTICE

- To avoid possible damage to the external device, first turn on the power to the instrument, then to the external device. When turning off the power, do so in reverse order: first turn off the power to the external device, then to the instrument.

Using a Pedal (Sustain)

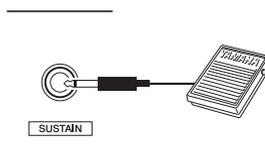


You can produce a natural sustain as you play by pressing a footswitch (FC5 or FC4A; sold separately) plugged into the [SUSTAIN] jack.

NOTE

- Plug or unplug the footswitch while the power is off. Also, do not press the footswitch when turning the power on. Doing so changes the polarity of the footswitch, resulting in reversed operation.
- The sustain function does not affect style (automatic accompaniment; page 18).

Using the music rest

Insert the music rest into the slots as shown.

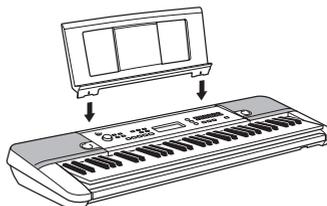

Display Items and Basic Operations

Display Items

Notation

Normally this indicates the notes you play. When the Song Lesson function is used, this indicates the current notes and chord of playback. When the Dictionary function (page 21) is used, this indicates the notes of the chord you specify.

NOTE

- Any notes occurring below or above the staff are indicated by "8va."
- For a few specific chords, not all notes may be shown, due to space limitations in the display.

Song/Voice/Style


These indicate the operating condition of the instrument.

SONG
VOICE
STYLE

On/Off status

Each indication is shown when the corresponding function is turned on.

- WIDE** ... Ultra-Wide Stereo (page 17)
- ACMP** ... Auto Accompaniment (page 18)
- DUAL** ... Indicates that a Dual Voice (No.321–335) is selected.
- DUO** ... Duo (page 22)

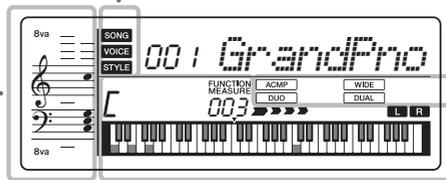

Chord

Indicates the chord which is played on the Auto Accompaniment range (page 18) of the keyboard, or specified via Song playback.



Measure or Function

Normally indicates the current measure number of current Style or Song. When the [FUNCTION] button (page 31) is in use, this indicates the Function number.

MEASURE FUNCTION
003 022

Keyboard Display

Indicates notes currently being played. Indicates the melody and chord notes of a Song when the Song lesson function is in use. Also indicates the notes of a chord—either when playing a chord or when using the Dictionary function (page 21).



Song Track status

Indicates the on/off status of Song playback or target Track of Song recording (page 25).



- R** **Lit:** Track contains data
- R** **Unlit:** Track is muted or contains no data

Beat

Indicates the current beat of playback.




Basic Operations

Before operating the instrument, it may be helpful to familiarize yourself with the basic controls below that are used to select items and change values.

■ Number buttons

Use the Number buttons to directly enter an item or value. For numbers that start with one or two zeroes, the first zeroes can be omitted.


Example: Selecting Voice 003, Bright Piano.

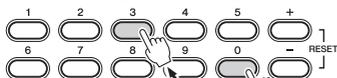

Press number buttons [0], [0], [3], or simply press [3].

■ [-] and [+] buttons

Press the [+] button briefly to increase the value by 1, or press the [-] button briefly to decrease the value by 1. Press and hold either button to continuously increase or decrease the value in the corresponding direction.

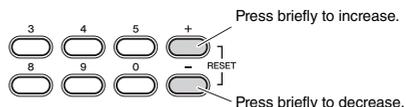


Playing a Variety of Instrument Voices

In addition to piano, organ, and other “standard” keyboard instruments, this instrument has a large range of Voices that includes guitar, bass, strings, sax, trumpet, drums and percussion, and even sound effects—giving you a wide variety of musical sounds.

Selecting a Voice


1 Press the [VOICE] button.

The Voice number and name will be shown.

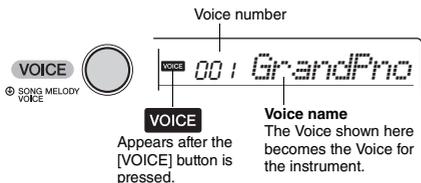


2 Use the number buttons [0]–[9], [+], [-] buttons to select the desired Voice.

Refer to the Voice List on page 35.

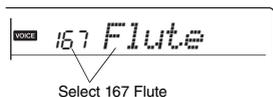

3 Play the keyboard.

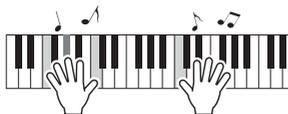

Preset Voice Types

001–384	Instrument Voices (including sound effects).
385–400 (Drum Kit)	Various drum and percussion sounds are assigned to individual keys, from which they can be played. Details on the instruments and key assignments of each Drum Kit can be found in the Drum Kit List on page 38.
000	One Touch Setting The One Touch Setting feature automatically selects the most suitable Voice when you select a Style or Song (excepting the Song inputted from the [AUX IN] jack). Simply select Voice number “000” to activate this feature.

Fun Sounds

You’ll be able to play various sound effects from the keyboard: barking, braying, yelling, and much more. Press the [SOUND EFFECT] button.



Try out each key and enjoy the sounds. Don’t forget the black keys! After trying out these sounds, press the [PORTABLE GRAND] button to reset the instrument Voice to the default setting of Voice “Grand Piano.” For details on the sound effects assigned to each key, refer to Drum Kit List (Voice No.400) on page 40.

Playing the “Grand Piano”

When you want to reset various settings to default and simply play a Piano sound, press the [PORTABLE GRAND] button.



The Voice “001 Grand Piano” will automatically be selected as the Voice.

Using the Metronome

The instrument features a built-in metronome (a device that keeps an accurate tempo), convenient for practicing.


- 1 Press the [METRONOME] button to start the metronome.



- 2 Press the [METRONOME] button again to stop the metronome.

To change the tempo:

Press the [TEMPO/TAP] button to call up the Tempo value, then use the number buttons [0]–[9], [+], [-].

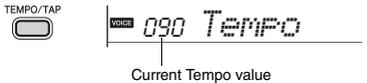

Press the [+] and [-] buttons simultaneously to instantly reset the value to the default tempo.

To set the Time Signature:

Press and hold the [METRONOME] button to call up “TimeSig” (Functions 016; page 32), then use the Number buttons.

To set the Metronome Volume:

This can be set via Function number 017 (page 32).

Playing with enhanced, more spacious sound (Ultra-Wide Stereo)

You can play the keyboard with a spacious, wider sound effect that gives you the sensation of hearing the sound outside of the speakers by turning on the Ultra-Wide Stereo effect.

- 1 Press the [ULTRA-WIDE STEREO] button to turn it on.



Appears when Ultra-Wide Stereo is on.

The sound will expand around you—as if the speaker position is outside of the instrument.

- 2 Press the [ULTRA-WIDE STEREO] button again to turn it off.

To select the Ultra-Wide Stereo type:

Press the [FUNCTION] button several times to call up “Wide” (Function 014; page 32), then use the Number buttons.

Applying Effects to the Sound

This instrument can apply various Effects as listed below to the instrument’s sound.

●Reverb

Adds the ambience of a club or concert hall to the sound. Although the best-suited Reverb type is called up by selecting a Song or Style, you can select another one via Function number 009 (page 32). You can also set the Reverb depth via Function number 010 (page 32).

●Chorus

Makes the Voice sound richer, warmer and more spacious. Although the best-suited Chorus type is called up by selecting a Song or Style, you can select another one via Function number 011 (page 32). You can also set the Chorus depth via Function number 008 (page 31).

●Panel Sustain

By turning on the Sustain parameter of Function number 012 (page 32), you can add a fixed, automatic sustain to the keyboard Voices. Sustain can also be applied as desired with the footswitch (sold separately; page 14).

NOTE


- Even if you turn on Panel Sustain, there are some Voices to which sustain is not applied.

Playing Styles


This instrument includes the Auto Accompaniment feature that plays appropriate “Styles” (rhythm + bass + chord accompaniment). You can select from a huge variety of Styles covering a wide range of musical genres.

- 1 Press the [STYLE] button, then use the number buttons [0]–[9], [+], [-] to select the desired Style.


The Style List is provided on the front panel, or in the Style List (page 42).

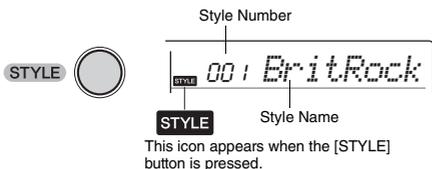

- 2 Press the [ACMP ON/OFF] button to turn on the Auto Accompaniment.

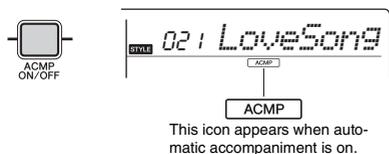


With this operation, the area of the keyboard to the left of the Split Point (054: F#2) becomes the “Auto Accompaniment range” and is used only for specifying the chords.

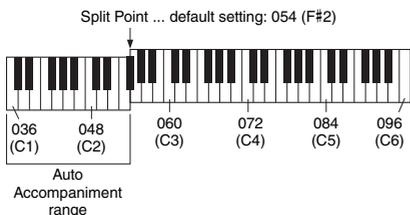

The highest key for the Auto Accompaniment range is referred to as the “Split Point,” which can be changed from the default of F#2 via Function number 005 (page 31).


- 3 Press the [SYNC START] button to turn Synchro Start on.

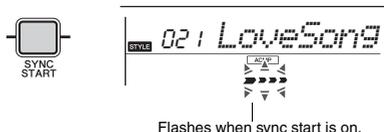

- 4 Play a chord in the Auto Accompaniment range to start playback.

Play a melody with the right hand and chords with the left hand.

For information about chords, refer to “Chord Types for Style Playback” (page 20) or use the Chord Dictionary function (page 21).

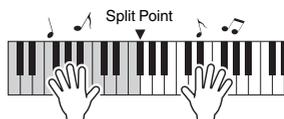

- 5 Press the [START/STOP] button to stop playback.



You can add intro, ending and rhythm variations to Style playback by using “Sections.” For details, refer to page 19.

To play back the rhythm part only

If you press the [START/STOP] button (without pressing the [ACMP ON/OFF] button in step 2), only the rhythm part can be played back, and you can play a melody performance using the entire keyboard range.

NOTE

- Since the Pianist category Styles (123–130) have no rhythm parts, no sound will be produced if you start rhythm-only playback. When playing these Styles, make sure to carry out Steps 2–4 on this page.

Adjusting the Style Volume

To adjust the volume balance between Style playback and keyboard, you can adjust the Style Volume. This can be set via Function number 001 (page 31).

Style Variations—Sections


Each Style consists of “Sections” that allow you to vary the arrangement of the accompaniment to match the song you are playing. These instructions cover a typical example for using the Sections.




1–3

Same as Steps 1–3 in page 18.

4 Press the [MAIN/AUTO FILL] button to select Main A or Main B.

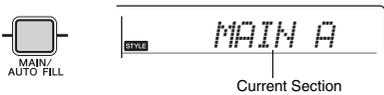


5 Press the [INTRO/ENDING/rit.] button.

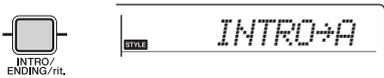

Now, you're ready to start Style playback from the Intro section.

6 Play a chord with your left hand to start playback of the Intro.

For this example, play a C major chord (as shown below). For information on how to enter chords, see “Chord Types for Style Playback” on page 20.

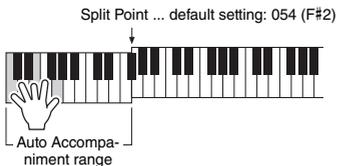


7 After the Intro finishes, play the keyboard according to the progression of the Song you are playing.

Play chords with your left hand while playing melodies with your right hand, and press the [MAIN/AUTO FILL] button as necessary. The Section will change to Fill-in then Main A or B.




8 Press the [INTRO/ENDING/rit.] button.

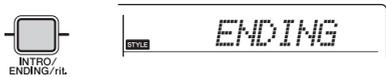

The Section switches to the Ending. When the Ending is finished, Style playback stops automatically. You can have the Ending gradually slow down (ritardando) by pressing the [INTRO/ENDING/rit.] button again while the Ending is playing back.

Changing the Tempo

Press the [TEMPO/TAP] button to call up the Tempo value, then use the [-] and [+] buttons to adjust the Tempo value.

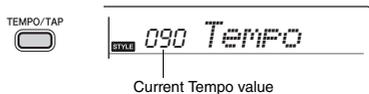

Press the [+] and [-] buttons simultaneously to reset the value to the default tempo of the current Style or Song.

Using the Tap function

While a Song or Style is playing back, press the [TEMPO/TAP] button just twice at the desired tempo to change the tempo. While Song or Style playback is stopped, tap the [TEMPO/TAP] button several times to start playback at the tapped tempo—four times for a 4-beat Song or Style or three times for a 3-beat Song or Style.



Chord Types for Style Playback

For users who are new to chords, this chart conveniently shows how to play common chords in the Auto Accompaniment range of the keyboard. Since there are many useful chords and many different ways to use them musically, refer to commercially available chord books for further details.

★ indicates the root note.

Major	Minor	Seventh	Minor Seventh	Major Seventh
C 	Cm 	C7 	Cm7 	CM7
D 	Dm 	D7 	Dm7 	DM7
E 	Em 	E7 	Em7 	EM7
F 	Fm 	F7 	Fm7 	FM7
G 	Gm 	G7 	Gm7 	GM7
A 	Am 	A7 	Am7 	AM7
B 	Bm 	B7 	Bm7 	BM7

- Inversions can be used as well as in "root" position—with the following exceptions: *m7, m7^{♯5}, m7(11), 6, m6, sus4, aug, dim7, 7^{♯5}, 6(9), sus2*
- Inversions of the 7sus4 chords are not recognized if the notes are omitted.
- Sus2 chords are indicated by the root name only.
- When playing a chord which cannot be recognized by this instrument, nothing is shown on the display. In such a case, only the rhythm and bass parts will be played.

Easy Chords

This method lets you easily play chords in the accompaniment range of the keyboard using only one, two, or three fingers.

For root "C"



To play a major chord
Press the root note (★) of the chord.



To play a minor chord
Press the root note together with the nearest black key to the left of it.



To play a seventh chord
Press the root note together with the nearest white key to the left of it.





To play a minor seventh chord
Press the root note together with the nearest white and black keys to the left of it (three keys altogether).

Looking Up Chords Using the Chord Dictionary

The Dictionary function is useful when you know the name of a certain chord and want to quickly learn how to play it.


1 Press and hold the [3 WAITING] button for longer than a second to call up "Dict."

"Dict." will appear in the display.

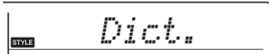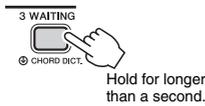


This operation will divide the entire keyboard into the three ranges as illustrated below.

- The range to the right of "ROOT": Lets you specify the Chord Root, but produces no sound.
- The range between "CHORD TYPE" and "ROOT": Lets you specify the Chord Type, but produces no sound.
- The range to the left of "CHORD TYPE": Lets you play and confirm the Chord specified in the above two ranges.


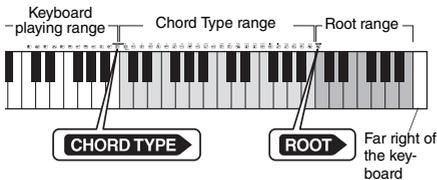


2 As an example, learn how to play a GM7 (G major seventh) chord.

- 2-1. Press the "G" key in the section to the right of "ROOT" so that the "G" is shown as the root note.

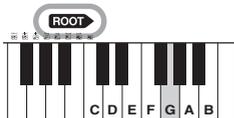

- 2-2. Press the key labeled "M7" in the section between "CHORD TYPE" and "ROOT". The notes you should play for the specified chord (root note and chord type) are conveniently shown in the display, both as notation and in the keyboard diagram.

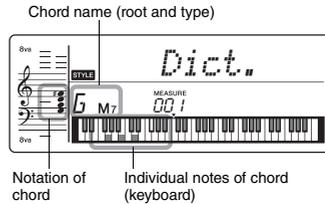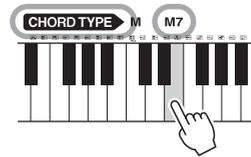

To call up possible inversions of the chord, press the [+]/[-] buttons.

NOTE

- About major chords: Simple major chords are usually indicated only by the root note. For example, "C" refers to C major. However, when specifying major chords here, make sure to select "M" (major) after pressing the root note.
- These chords are not shown in the Chord Dictionary function: 6(9), M7(9), M7(#11), ♭5, M7♭5, M7aug, m7(11), mM7♭5, 7♭5, sus2

3 Following the notation and keyboard diagram in the display, try playing a chord in the range to the left of "CHORD TYPE".


When you've played the chord properly, a bell sound signals your success and the chord name in the display flashes.

Playing the keyboard with two persons (Duo mode)

When the Duo mode is activated on this instrument, two different players can play the instrument simultaneously, with the same sound, over the same octave range—one person on the left and the other on the right. This is useful for learning applications, in which one person (a teacher, for example) plays a model performance and the other person watches and practices while sitting at the first person's side.

- 1 To start this instrument in the Duo mode, simultaneously hold down the [L] button and press the [⏻] (Standby/On) switch to turn on the power.

“DuoMode” is shown in the display for a few seconds, and the F#3 key becomes the Split Point and the keyboard is divided into two sections: left and right.

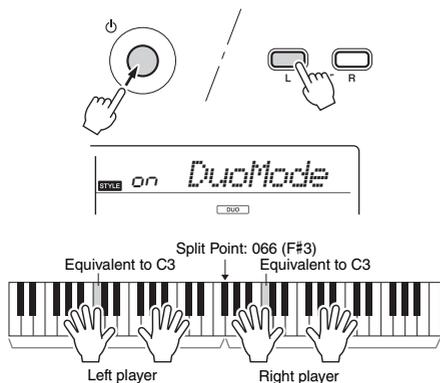

NOTE

- The left section and the right section of the keyboard are both set to the same Voice (except for Voice numbers 321–335).
- In the Duo mode, the Split Point cannot be changed from F#3.

- 2 One person should play the left section of the keyboard while the other plays the right section.

Selecting a Voice

Select a Voice by executing Steps 1 and 2 in “Selecting a Voice” on page 16.

NOTE

- When the Dual Voice (Voice number 321–335) is selected, the left section will sound only the Main Voice.
- The Lesson function cannot be used in the Duo mode.

How sounds are output in the Duo mode

Notes played in the left section sound from the left side speaker while notes played in the right section sound from the right side speaker, in the initial Duo mode setting. This output setting can

be changed from the “VoiceOut” setting (Function 015; page 32).

NOTE

- In the Duo mode, the pan, volume and tonal characteristics of the stereo sound may differ from those in the normal mode, due to the setting of VoiceOut = “Separate” (page 32). Particularly with Drum Kits, the difference may be more obvious, since each key of a Drum Kit features a different stereo pan position.

Using sustain in the Duo mode

Sustain can be applied to the left and right sections' Voices in Duo mode just as it normally is by using one of the following methods in the Duo mode like the usual mode.

- Press the foot switch (page 14) connected to the [SUSTAIN] jack.
- Set “Sustain” (Function 012; page 32) to on.

NOTE

- Sustain cannot be applied independently to the left section's Voice and the right section's Voice.
- While Panel Sustain is on, the setting of hold is maintained even when the power is turned off.

Style Playback in the Duo mode

Although full Style features (accompaniment) cannot be used in the Duo mode, the rhythm part of a Style can be played back while playing the left/right sections normally.

Phrase recording in the Duo mode

The notes played in the left and right sections are recorded on the same track.

- 3 To exit from the Duo mode, press the [⏻] (Standby/On) switch to turn off the power, and turn the power back on again normally.

Playing Songs

You can simply enjoy listening to the internal Songs, or use them with just about any of the functions, such as Lesson.

Listening to a Demo Song

Press the [DEMO] button to play the Demo Songs in sequence.



When Song numbers 001 to 003 are played back in sequence and the last Song (003) is finished, playback will repeat continuously, starting again from the first Song (001).

To stop playback, press the [DEMO] button.


NOTE

- You can select the next or previous Song in order by using the [+]/[-] buttons after pressing the [DEMO] button. The selection range is all Songs in the selected Demo Group (Function 019; page 32).

Selecting and Playing Back a Song

- Press the [SONG] button, then use the Number buttons to select the desired Song.

Refer to the Song List (page 41).

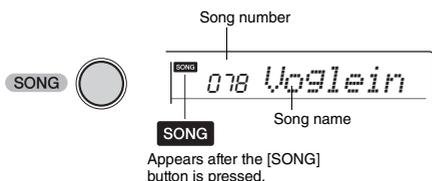

- Press the [START/STOP] button to start playback.

To stop playback, press the [START/STOP] button again.



To change the tempo:

Refer to “Changing the Tempo” on page 19.

Adjusting the Song Volume

To adjust the volume balance between Song playback and keyboard, you can adjust the Song Volume. This can be set via Function number 002 (page 31).

BGM Playback

With the default setting, pressing the [DEMO] button will play back only three internal Demo Songs repeatedly. This setting can be changed so that, for example, all internal Songs automatically play back, letting you use the instrument as a background music source.

- Hold down the [DEMO] button for longer than a second.

“DemoGrp” (Function 019; page 32) is shown in the display for a few seconds, followed by the current repeat playback target.



Hold for longer than a second.

- Use the [+] or [-] button to select a playback group.

Demo	Preset Songs (001–003)
Preset	All preset Songs (001–100)
User	User Song (113)

- Press the [DEMO] button to start playback.

To stop playback, press the [DEMO] button again or press the [START/STOP] button.

Random Song Playback


When the Demo Group (above) is set to “Preset,” the playback order via the [DEMO] button can be changed between numerical order and random order. To do this, press the [FUNCTION] button several times until “PlayMode” (Function 020; page 32) is called up, then select “Normal” or “Random.”

Song Fast Forward, Fast Reverse, and Pause

Like the transport controls on an audio player, this instrument lets you fast forward (FF), rewind (REW) and pause (PAUSE) playback of the Song.

Fast Forward

During playback, press this button to rapidly skip ahead to a later point in the Song.

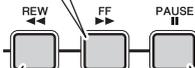

Fast Reverse

During playback, press this button to rapidly return to an earlier point in the Song.

Pause

During playback, press this button to pause playback, and press again to start from that point.

NOTE

- When the A-B repeat is specified, the Fast Reverse and Fast Forward will only work within the range between A and B.
- [REW], [FF] and [PAUSE] button cannot be used during Song playback by using the [DEMO] button.

Changing the Melody Voice

You can change a Song's melody Voice to any other desired Voice.


- 1 Select a Song.
- 2 Select the desired Voice.
- 3 Press and hold the [VOICE] button for longer than a second.
"SONG MELODY VOICE" appears in the display for a few seconds, and the selected Voice replaces the Song's original melody Voice.

NOTE

- Selecting another Song will cancel the changed Melody Voice.
- You cannot change the melody Voice of a User Song.

A-B Repeat

You can play back only a specific section of a Song repeatedly by setting the A point (start point) and B point (end point) in one-measure increments.

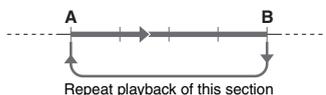

- 1 Start playback of the Song (page 23).
- 2 When playback reaches to the point you want to specify as the start point, press the [A-B REPEAT] button to set the A point.



- 3 When playback reaches to the point you want to specify as the end point, press the [A-B REPEAT] button again to set the B point.

The specified A-B section of the song will now play repeatedly.

NOTE

- You can also set the A-B Repeat function when the Song is stopped. Simply use the [REW] and [FF] buttons to select the desired measures, pressing the [A-B REPEAT] button for each point, then start playback.
- If you want to set the start point "A" at the top of the Song, press the [A-B REPEAT] button before starting playback.


- 4 To cancel repeat playback, press the [A-B REPEAT] button.
To stop playback, press the [START/STOP] button.

NOTE

- The A-B Repeat function will be canceled when you select another Song.

Turning Each Part On/Off

As indicated above the panel buttons (shown below), a Song consists of two Parts, which can be turned on or off individually by pressing the corresponding button, L or R.

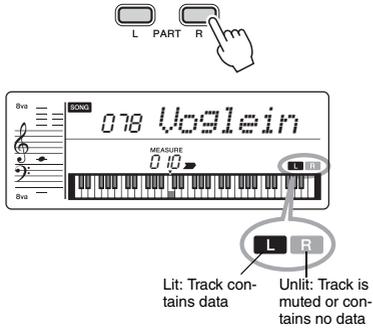

By turning the left- and right-hand parts on or off during playback, you can listen to the Part (that is turned on), or practice the other part (that is turned off) on the keyboard.

NOTE


- Selecting another Song will cancel the on/off status of the Parts.

Hearing and Experiencing the Sound of the Chords (Chord Study)

You can hear and experience the sound of the chords used in a typical performance by playing back Song numbers 101 to 112 (in the “Chord Study” category). Song numbers 101 to 107 are very simple songs consisting of a single chord (C, Dm, Em, F, G, Am, Bm; respectively) played in various positions, letting you listen to and master the chords one by one. On the other hand, Song numbers 108 to 112 consist of several chords strung together in a pattern, for experiencing and understanding basic chord progressions. Hear and experience the sound of simple chords and progressions by playing back these Songs, and play the keyboard while following along with the music notation and key/chord indications shown in the display.

Hear and experience a sound of a single chord

- 1 Select a Song from Song numbers 101 to 107 in the “CHORD STUDY” category by executing Step 1 in “Selecting and Playing Back a Song” on page 23.
- 2 Press the [START/STOP] button to play back the selected Song.
- 3 Play the keyboard while looking at the notes shown on the display.

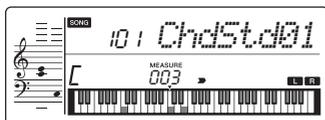

NOTICE

- When playing the keyboard while playing back a Song, you should turn off any parts you don't intend to have played back (page 25), to avoid exceeding the maximum number of simultaneous notes.

NOTE

- You can use the waiting function (page 27) by pressing the [3 WAITING] button.

Hear and experience basic chord progressions

- 1 Select a Song from Song numbers 108 to 112 by pressing the [+]/[-] buttons.
- 2 Press the [START/STOP] button to play back the selected Song.
- 3 Play the keyboard while looking at the notes shown on the display.

Listen to the basic chord progression, and play along with the Song repeatedly until you can smoothly perform and play along with the chord changes.

NOTE

- You can use the waiting function (page 27) by pressing the [3 WAITING] button.

Using the Song Lesson Feature

You can use the selected Song for a left-hand, right-hand, or both-hands lesson. Try practicing with three Song Lesson types while referring to the music scores in the Song Book (page 8).

Listening, Timing and Waiting

● Lesson 1—Listen & Learn

In this Lesson, you need not play the keyboard. The model melody/chords of the part you selected will sound. Listen to it carefully and remember it well.

● Lesson 2—Timing

In this Lesson, simply concentrate on playing the notes with the correct timing. Even if you play wrong notes, the correct notes shown in the display will sound.

● Lesson 3—Waiting

In this Lesson, try playing the correct notes shown on the display. The Song pauses until you play the right note, and playback tempo will change to match the speed at which you are playing.


NOTE 1

- If you want to keep a steady playback tempo maintained during Lesson 3: Waiting, set the Your Tempo parameter to OFF via the Function number 018 (page 32).

Practicing with Song Lesson

1 Press the [SONG] button then select a Song for your lesson.


2 Press either or both the [R] and [L] buttons to select the part you want to practice.

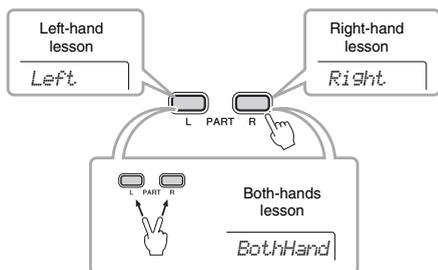

NOTE 1

- In this step, “No LPart” may appear, indicating that the current Song does not contain a left-hand part.

3 Press any one of the [1 LISTEN & LEARN], [2 TIMING] or [3 WAITING] buttons to start playback of the Song Lesson.

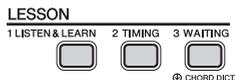

NOTE 1

- During playback, you can change the Lesson mode by pressing this button, and you can stop the Lesson at any time by pressing the [START/STOP] button.
- The Voice changes to “000” (One Touch Setting; page 16) during the lesson.

4 When Lesson playback reaches to the end, check your evaluation Grade on the display.

“2 Timing” and “3 Waiting” will evaluate your performance in four levels.

Excellent! ■■■■■■■■
 Very Good! ■■■■■■
 Good ■■■■
 OK ■■

After the evaluation display has appeared, the lesson will start again from the beginning.

NOTE 1

- When the melody Voice of the Song is changed, the key position shown in the display may be shifted (in octave units), depending on the selected Voice.

5 Stop the Lesson mode.

You can stop the Lesson mode at any time by pressing the [START/STOP] button.


Playing an External Audio Device with the Built-in Speakers

You can output the sound of an external audio device, such as a portable music player, with the built-in speakers of this instrument by connecting it via a cable. This lets you play the keyboard along with playback of your music player.

1 Turn off the power for both the external audio device and this instrument.

2 Connect the audio device to the instrument's [AUX IN] jack.

Use an audio cable with no resistance having a stereo-mini plug on one side for connecting to this instrument, and a proper plug to match the output jack of the external audio device on the other side.

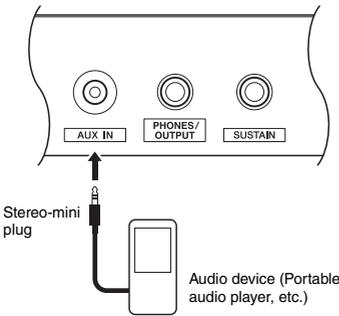

3 Turn on the external audio device, then this instrument.

4 Play back the connected external audio device.

The sound of the audio device is output through the speakers of this instrument.

5 Adjust the volume balance between the external audio device and this instrument.

If possible, adjust the playback level of the external audio device first, to achieve optimum balance.

6 Play the keyboard along with the sound of the audio device.

7 After finishing the performance, stop playback of the audio device.

CAUTION

- Before connecting, turn off the power of both this instrument and the external audio device. Also, before turning the power on or off, make sure to set all volume levels to minimum (0). Otherwise, damage to the devices, electrical shock, or even permanent hearing loss may occur.

NOTICE

- After connecting, first turn on the power to the external audio device then to this instrument. Reverse this order when you turn the power off.


Recording Your Performance (Phrase Recording)

You can record your performance as a User Song (Song number 113), which can then be played back on the instrument. The recorded User Song can be played back in the same way as the preset Songs.

NOTE

- A total of approximately 300 notes can be recorded to the User Song.

- 1 Select the desired Voice.
- 2 Press the [PHRASE REC] button to enable the Record mode.

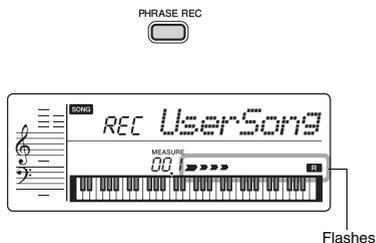

To exit from the Record mode, press the [PHRASE REC] button again. (The display stops flashing.)

NOTICE

- If the User Song is recorded, the data will be recorded over and erased (you will record over and erase previous data in "User Song").

- 3 Play the keyboard to start recording.

NOTICE

- Never attempt to turn the power off or connect or disconnect the AC adaptor. Doing so can result in a loss of data.

NOTE

- When recording capacity becomes full during recording, a "Mem Full" message appears on the display, recording is stopped, and the Song select display is shown.
- If you press the [START/STOP] button, even if you don't play the keyboard, recording starts.

Limitations while recording:

- The following settings/operations cannot be recorded: Reverb Level, Style, metronome click, Transpose, Tuning.
- The following settings and buttons are not available, or if operated, the new settings cannot be recorded:
Split Point, Reverb Type, Chorus Type, [FUNCTION] button, [PORTABLE GRAND] button.

- 4 Press the [START/STOP] button to stop recording.
- 5 To play back the recorded Song, press the [START/STOP] button.

NOTE


- If you make a mistake or want to erase an existing Song, you can delete the User Song. To do this, enable the Record mode in step 2, and then press the [START/STOP] button twice in succession (without playing the keyboard).

Selecting an EQ Setting for the Best Sound

Six different master equalizer (EQ) settings give you the best possible sound when listening through different reproduction systems—the instrument's internal speakers, headphones, or an external speaker system.

- 1 Hold down the [ULTRA-WIDE STEREO] button for longer than a second to call up "013 MasterEQ" (Function 013; page 32).

"MasterEQ" is shown in the display for a few seconds, and the current Master EQ type appears.

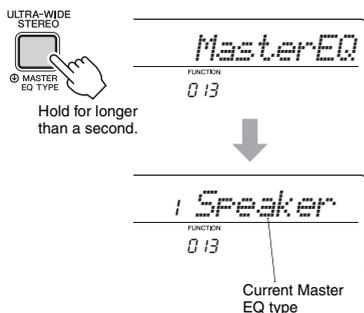

- 2 Use the [+] or [-] button to select the desired Master EQ type.

Master EQ types


1	Speaker	Optimum for listening via the instrument's built-in speakers.
2	Headphone	Optimum for headphones, or for listening via external speakers.
3	Boost	Features more powerful sound.
4	Piano	Optimum for piano solo performance.
5	Bright	Lowers the mid range for a brighter sound.
6	Mild	Lowers the high range for a softer sound.

The Functions

The Functions settings provide access to a range of detailed instrument parameters such as Tuning, Split Point, Voices and Effects.

1 Press the [FUNCTION] button several times until the desired item appears.

Each time the [FUNCTION] button is pressed, the Function number increases one by one. To decrease the Function number by one, simultaneously hold down the [FUNCTION] button and press the [-] button briefly. Simply pressing only the [+] or [-] button does not change the Function number.

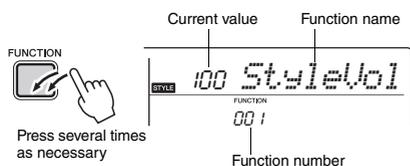


After a few seconds, the Function name may be replaced with the setting value depending on the selected Function.

NOTE

- The Function number does not appear in the display during Song, Style or metronome playback. The beat value appears instead.

2 Set the value by using the number buttons [0]–[9], [+], [-].

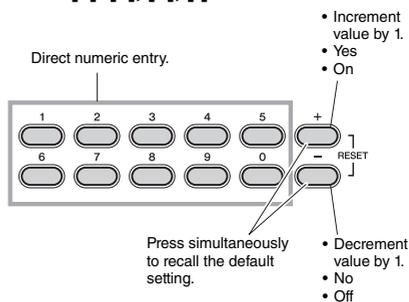

NOTE

- To exit the Function settings, press one of these buttons: [SONG], [VOICE] or [STYLE].

Function List

Function Number	Function name	Display	Range/Settings	Default Value	Descriptions
Volume					
001	Style Volume	<i>StyleVol</i>	000–127	100	Determines the volume of the Style. (page 18)
002	Song Volume	<i>SongVol</i>	000–127	100	Determines the volume of the Song. (page 23)
Overall					
003	Transpose	<i>Transpos</i>	-12–12	0	Determines the pitch of the instrument in semitone increments.
004	Tuning	<i>Tuning</i>	427.0Hz–453.0Hz	440.0Hz	Determines the fine tuning of the pitch of the entire instrument in approx. 0.2Hz increments.
005	Split Point	<i>SplitPnt</i>	036–096 (C1–C6)	54 (F#2)	Determines the Split "point"—in other words, the key that separates the auto accompaniment range and Voice.
Voice (page 16)					
006	Volume	<i>M. Volume</i>	000–127	*	Adjusts the volume of keyboard performance when performing along with a Song or a Style.
007	Octave	<i>M. Octave</i>	-2–+2	*	Determines the octave range for the Voice.
008	Chorus Depth	<i>M. Chorus</i>	000–127	*	Determines how much of the Voice's signal is sent to the Chorus effect.

Function Number	Function name	Display	Range/Settings	Default Value	Descriptions
Effects					
009	Reverb Type	<i>Reverb</i>	1-3 (Hall 1-3) 4-5 (Room 1-2) 6-7 (Stage 1-2) 8-9 (Plate 1-2) 10 (Off)	**	Determines the Reverb type, including off (10). (page 43)
010	Reverb Level	<i>RevLevel</i>	000-127	64	Determines how much of the Voice's signal is sent to the Reverb effect.
011	Chorus Type	<i>Chorus</i>	1 (Chorus1) 2 (Chorus2) 3 (Chorus3) 4 (Flanger1) 5 (Flanger2) 6 (off)	**	Determines the Chorus type, including off (6). (page 43)
012	Panel Sustain	<i>Sustain</i>	ON/OFF	OFF	Determines whether the Panel Sustain function is on or off.
013	Master EQ Type	<i>MasterEQ</i>	1 (Speaker) 2 (Headphone) 3 (Boost) 4 (Piano) 5 (Bright) 6 (Mild)	1 (Speaker)	Sets the equalizer applied to the speaker output for optimum sound in different listening situations. (page 30)
014	Wide Type	<i>Wide</i>	1 (Wide1) 2 (Wide2) 3 (Wide3)	2 (Wide2)	Determines the Ultra-Wide Stereo type. Higher values produce a greater Wide effect. (page 17)
015	Voice Output	<i>VoiceOut</i>	1 (Normal) 2 (Separate)	2 (Separate)	When the Duo mode (page 22) is on, this function is effective. If "Normal" is selected, the performance sounds of the left section and the right section will sound from both the left and right speakers. If "Separate" is selected, the performance sound of the left section will sound from the left speaker, and the performance sound of the right section will sound from the right speaker.
Metronome (page 17)					
016	Time Signature Numerator	<i>TimeSig</i>	00-15	**	Determines the time signature of the Metronome.
017	Metronome Volume	<i>MetroVol</i>	000-127	100	Determines the volume of the Metronome.
Lesson (page 27)					
018	Your Tempo	<i>YourTemp</i>	ON/OFF	ON	This parameter is for the Lesson 3 "Waiting." When set to ON, playback tempo will change for matching the speed you are playing at. When set to OFF, playback tempo will be maintained regardless of the speed you are playing at.
Demo (page 23)					
019	Demo Group	<i>DemoGrp</i>	1 (Demo) 2 (Preset) 3 (User)	1 (Demo)	Determines the repeat playback group.
020	Demo Play Mode	<i>PlayMode</i>	1 (Normal) 2 (Random)	1 (Normal)	Determines the repeat playback mode.
Auto Power Off (page 13)					
021	Auto Power Off Time	<i>AutoOff</i>	OFF, 5/10/15/30/60/120 (minutes)	30 minutes	Specifies the time that will elapse before the instrument's power is automatically turned off.
Battery (page 13)					
022	Battery Type	<i>Battery</i>	1 (Alkaline) 2 (Ni-MH)	1 (Alkaline)	Selects the type of batteries you have installed to this instrument. Alkaline: Alkaline battery/manganese battery Ni-MH: Rechargeable battery

* The appropriate value is automatically set for each Voice combination.

** The appropriate value is automatically set for each Song or Style.

Backup and Initialization

Backup Parameters

The following Backup parameters will be maintained even if the power is turned off.

Backup parameters

- User Songs (page 29)
- FUNCTION Settings: (page 31)
Tuning, Your Tempo, Master EQ type, Panel Sustain, Auto Power Off, Battery Type

To initialize Backup data, execute “Backup Clear.”

NOTICE

Note that the following situations cannot back up or maintain the settings of the Backup parameters.

- *When the AC adaptor is unplugged with the power on (even if batteries are installed):*
- *When the power is turned off due to accidents such as electric power failure:*
- *When the Alkaline battery/Manganese battery runs down (without connecting the AC adaptor):*

Initialization

You can initialize your original data via the following method.

Backup Clear

This operation initializes the backup parameters. While holding down the highest white key, press the [⏻] (Standby/On) switch to turn the power on.



Troubleshooting

Problem	Possible Cause and Solution
When the instrument is turned on or off, a popping sound is temporarily produced.	This is normal and indicates that the instrument is receiving electrical power.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument.
Noise is heard from the instrument's speakers or headphones when using the instrument with the application on iPhone/iPad/iPod touch.	When you use the instrument along with the application on your iPhone/iPad/iPod touch, we recommend that you set "Airplane Mode" to "ON" on your iPhone/iPad/iPod touch in order to avoid noise caused by communication.
There is no sound even when the keyboard is played or when a song or style is being played back.	Check that nothing is connected to the [PHONES/OUTPUT] jack on the rear panel. When a set of headphones is plugged into this jack, no sound is output.
Playing keys in the right hand area of the keyboard does not produce any sound.	When using the Dictionary function (page 21), the keys in the right hand area are used only for entering the chord root and type.
Not all of the voices seem to sound, or the sound seems to be cut off.	The instrument is polyphonic up to a maximum of 32 notes. If a style or Song is playing back at the same time, some notes/sounds may be omitted (or "stolen") from the accompaniment or Song.
Regardless of how strongly play the keys, the level of the sound does not change.	Since this keyboard does not have touch response, the level of the sound does not change in response to your playing strength.
The ACMP ON indicator does not appear when the [ACMP ON/OFF] button is pressed.	<ul style="list-style-type: none"> Always press the [STYLE] button first when you are going to use any Style-related function. The ACMP ON indicator does not appear when the Duo mode is on.
The Style does not sound properly.	<p>Make sure that the Style Volume (page 31 Function 001) is set to an appropriate level.</p> <p>Is the Split Point set to an appropriate key for the chords you are playing? Set the Split Point to an appropriate key (page 31 Function 005).</p> <p>Is the "ACMP ON" indicator showing in the display? If it is not showing, press the [ACMP ON/OFF] button so that it does show.</p>
The Style does not sound as you play a chord.	<ul style="list-style-type: none"> The auto accompaniment will sometimes not change when related chords are played in sequence (e.g., some minor chords followed by the minor seventh). Two-note fingerings will produce a chord based on the previously played chord. Playing two same root keys in the adjacent octaves produces accompaniment based only on the root.
The footswitch (for sustain) seems to produce the opposite effect. For example, pressing the footswitch cuts off the sound and releasing it sustains the sounds.	The polarity of the footswitch is reversed. Make sure that the footswitch plug is properly connected to the [SUSTAIN] jack before turning on the power.
The sound of the voice changes from note to note.	This is normal. The AWM tone generation method uses multiple recordings (samples) of an instrument across the range of the keyboard; thus, the actual sound of the voice may be slightly different from note to note.
<ul style="list-style-type: none"> The volume is too soft. The sound quality is poor. The rhythm stops unexpectedly or will not play. The recorded data of the song, etc. does not play correctly. The LCD display suddenly goes dark, and all panel settings are reset. 	The batteries are low or dead. Replace all six batteries with completely new ones, or use the included AC adaptor.
Power suddenly and unexpectedly turns off.	This is normal and the Auto Power Off function may have been activated (page 13). If you need to disable the Auto Power Off function, select "Off" in the Function settings (Function 021; page 32).
When the instrument is turned on, power is turned off suddenly and unexpectedly.	This is normal. If an AC adaptor other than the one specified is used, power may be turned off suddenly and unexpectedly.

Voice List

Maximum Polyphony

The instrument has 32-note maximum polyphony. This means that it can play a maximum of up to 32 notes at once, regardless of what functions are used. Auto accompaniment uses a number of the available notes, so when auto accompaniment is used the total number of available notes for playing on the keyboard is correspondingly reduced. The same applies to the Song functions. If the maximum polyphony is exceeded, earlier played notes will be cut off and the most recent notes have priority (last note priority).

NOTE

- Some voices may sound continuously or have a long decay after the notes have been released while the sustain pedal (footswitch) is held.

Voice No.	Voice Name
PIANO	
1	Grand Piano
2	Mono Grand Piano
3	Bright Piano
4	Mellow Piano
5	Honky-tonk Piano
6	Piano Strings
7	Dream
8	Harpsichord 1
9	Harpsichord 2
E.PIANO	
10	Electric Piano 1
11	Electric Piano 2
12	Electric Piano 3
13	Electric Grand Piano
14	Chorus Electric Piano 1
15	Chorus Electric Piano 2
16	Detuned Electric Piano
17	DX + Analog Electric Piano
18	Clavi
19	Wah Clavi
ORGAN	
20	Drawbar Organ 1
21	Drawbar Organ 2
22	60s Drawbar Organ 1
23	60s Drawbar Organ 2
24	60s Drawbar Organ 3
25	70s Drawbar Organ 1
26	70s Drawbar Organ 2
27	Detuned Drawbar Organ
28	Percussive Organ 1
29	Percussive Organ 2
30	70s Percussive Organ
31	Detuned Percussive Organ
32	16+2/2/3 Organ
33	Organ Bass
34	Rock Organ
35	Rotary Organ
36	Slow Rotary Organ
37	Fast Rotary Organ
38	Pipe Organ 1
39	Pipe Organ 2
40	Pipe Organ 3
41	Organ Flute
42	Tremolo Organ Flute
43	Notre Dame
44	Cheezy Organ
45	Light Organ
46	Reed Organ
47	Puff Organ
ACCORDION	
48	Accordion
49	Tango Accordion 1

Voice No.	Voice Name
50	Tango Accordion 2
51	Harmonica 1
52	Harmonica 2
GUITAR	
53	Nylon Guitar
54	Steel Guitar
55	Nylon & Steel Guitar
56	Steel Guitar with Body Sound
57	Muted Steel Guitar
58	12-string Guitar
59	Jazz Guitar
60	Jazz Amp
61	Jazz Man
62	Clean Guitar
63	Chorus Guitar
64	Funk Guitar
65	Guitar Pinch
66	Muted Guitar
67	Overdriven Guitar
68	Distortion Guitar
69	Feedback Guitar 1
70	Feedback Guitar 2
71	Guitar Feedback
72	Guitar Harmonics 1
73	Guitar Harmonics 2
74	Guitar Harmonics 3
BASS	
75	Acoustic Bass 1
76	Acoustic Bass 2
77	Finger Bass 1
78	Finger Bass 2
79	Finger Dark
80	Finger Slap Bass
81	Pick Bass
82	Fretless Bass 1
83	Fretless Bass 2
84	Fretless Bass 3
85	Fretless Bass 4
86	Slap Bass 1
87	Slap Bass 2
88	Slap Bass 3
89	Jazz Rhythm
90	Bass & Distorted Electric Guitar
91	Muted Pick Bass
92	Modulated Bass
93	Punch Thumb Bass
94	Synth Bass 1
95	Synth Bass 2
96	Synth Bass 2 Dark
97	Techno Synth Bass
98	Mellow Synth Bass

Voice No.	Voice Name
99	Sequenced Bass
100	Click Synth Bass
101	Modular Synth Bass
102	DX Bass
STRINGS	
103	Strings 1
104	Strings 2
105	Strings 3
106	Slow Strings
107	Stereo Strings
108	Stereo Slow Strings
109	Orchestra 1
110	Orchestra 2
111	60s Strings
112	Suspense Strings
113	Legato Strings
114	Warm Strings
115	Kingdom
116	Tremolo Strings
117	Slow Tremolo Strings
118	Tremolo Orchestra
119	Pizzicato Strings
120	Violin
121	Slow Violin
122	Viola
123	Cello
124	Contrabass
125	Orchestral Harp
126	Synth Strings 1
127	Synth Strings 2
128	Orchestra Hit 1
129	Orchestra Hit 2
130	Impact
CHOIR	
131	Choir Aahs
132	Voice Oohs
133	Stereo Choir
134	Mellow Choir
135	Choir Strings
136	Synth Voice 1
137	Synth Voice 2
138	Choral
139	Analog Voice
SAXOPHONE	
140	Tenor Sax
141	Breathy Tenor Sax
142	Alto Sax
143	Soprano Sax
144	Baritone Sax
145	Sax Section
146	Clarinet
147	Oboe
148	English Horn

Voice List

Voice No.	Voice Name
149	Bassoon
TRUMPET	
150	Trumpet
151	Warm Trumpet
152	Muted Trumpet
153	Trombone 1
154	Trombone 2
155	Trumpet & Trombone Section
156	French Horn 1
157	French Horn 2
158	French Horn Solo
159	Horn Orchestra
160	Tuba
BRASS	
161	Brass Section
162	Synth Brass 1
163	Synth Brass 2
164	Soft Brass
165	Resonant Synth Brass
166	Choir Brass
FLUTE	
167	Flute
168	Piccolo
169	Pan Flute
170	Recorder
171	Blown Bottle
172	Shakuhachi
173	Whistle
174	Ocarina
SYNTH LEAD	
175	Square Lead 1
176	Square Lead 2
177	LM Square
178	Sawtooth Lead 1
179	Sawtooth Lead 2
180	Thick Sawtooth
181	Dynamic Sawtooth
182	Digital Sawtooth
183	Fargo
184	Funky Lead
185	Sine Lead
186	Solo Sine
187	Calliope Lead
188	Chiff Lead
189	Charang Lead
190	Voice Lead
191	Fifths Lead
192	Bass & Lead
193	Hollow
194	Shroud
195	Mellow
196	Big Lead
197	Sequenced Analog
198	Pure Lead
199	Distorted Lead
200	Big Five
201	Big & Low
202	Fat & Perky
SYNTH PAD & EFFECT	
203	New Age Pad
204	Fantasy
205	Warm Pad
206	Poly Synth Pad
207	Equinox

Voice No.	Voice Name
208	Choir Pad
209	Bowed Pad
210	Metallic Pad
211	Halo Pad
212	Sweep Pad
213	Soft Whirl
214	Itopia
215	Rain
216	Sound Track
217	Crystal
218	Atmosphere
219	Brightness
220	Goblins
221	Echoes
222	Sci-Fi
223	African Wind
224	Carib
225	Prologue
226	Synth Drum Comp
227	Popcorn
228	Tiny Bells
229	Round Glockenspiel
230	Glockenspiel Chimes
231	Clear Bells
232	Chorus Bells
233	Soft Crystal
234	Air Bells
235	Warm Atmosphere
236	Hollow Release
237	Nylon Electric Piano
238	Nylon Harp
239	Harp Vox
240	Atmosphere Pad
241	Goblins Synth
242	Creeper
243	Ritual
244	To Heaven
245	Night
246	Glisten
247	Bell Choir
248	Bell Harp
PERCUSSION	
249	Vibraphone
250	Soft Vibraphone
251	Marimba
252	Soft Marimba
253	Sine Marimba
254	Balimba
255	Log Drums
256	Xylophone
257	Steel Drums
258	Celesta
259	MusicBox 1
260	MusicBox 2
261	Church Bells
262	Carillon
263	Tubular Bells
264	Timpani
265	Glockenspiel
266	Tinkle Bell
267	Agogo
268	Woodblock
269	Castanets
270	Melodic Tom 1
271	Melodic Tom 2

Voice No.	Voice Name
272	Real Tom
273	Rock Tom
274	Electronic Percussion
275	Analog Tom
276	Synth Drum
277	Taiko Drum
278	Gran Cassa
279	Gamelimba
280	Glass Percussion
281	Reverse Cymbal
WORLD	
282	Banjo
283	Muted Banjo
284	Fiddle
285	Bagpipe
286	Dulcimer 1
287	Dulcimer 2
288	Cimbalom
289	Santur
290	Kanoon
291	Oud
292	Rabab
293	Kalimba
294	Harmonium 1 (Single Reed)
295	Harmonium 2 (Double Reed)
296	Harmonium 3 (Triple Reed)
297	Tanpura
298	Sitar 1
299	Sitar 2
300	Detuned Sitar
301	Pungi
302	Shehnai
303	Gopichant
304	Tabla
305	Er Hu
306	Di Zi
307	Pi Pa
308	Gu Zheng
309	Yang Qin
310	Shamisen
311	Koto
312	Taisho-kin
313	Mandolin
314	Ukulele
315	Bonang
316	Altair
317	Gamelan Gongs
318	Stereo Gamelan Gongs
319	Rama Cymbal
320	Thai Bells
DUAL*	
321	Octave Piano
322	Piano & Pizzicato Strings
323	Piano & Flute
324	Piano Pad
325	Octave Honky-tonk Piano
326	Harpichord & Strings
327	Electric Piano Pad 1
328	Electric Piano Pad 2
329	Electric Piano Pad 3
330	Octave Strings
331	Octave Brass
332	Orchestra Tutti
333	Octave Choir

Voice No.	Voice Name
334	Jazz Section
335	Flute & Clarinet
SOUND EFFECTS	
336	Fret Noise
337	Breath Noise
338	Cutting Noise 1
339	Cutting Noise 2
340	String Slap
341	Flute Key Click
342	Bird Tweet 1
343	Bird Tweet 2
344	Telephone Ring 1
345	Telephone Ring 2
346	Phone Call
347	Shower
348	Thunder
349	Wind
350	Stream
351	Seashore
352	Bubble
353	Feed
354	Dog
355	Horse
356	Maou
357	Door Squeak
358	Door Slam
359	Scratch Cut
360	Scratch Split
361	Wind Chime
362	Car Engine Ignition
363	Car Tires Squeal
364	Car Passing
365	Car Crash
366	Siren
367	Train
368	Helicopter
369	Jet Plane
370	Starship
371	Burst
372	Roller Coaster
373	Submarine
374	Laugh
375	Scream
376	Punch
377	Heartbeat
378	Footsteps
379	Applause
380	Gunshot
381	Machine Gun
382	Laser Gun
383	Explosion
384	Firework
DRUM KITS	
385	Standard Kit 1
386	Standard Kit 2
387	Room Kit
388	Rock Kit
389	Electronic Kit
390	Analog Kit
391	Dance Kit
392	Jazz Kit
393	Brush Kit
394	Symphony Kit
395	StdKit 1 + Chinese Perc.
396	Indian Kit

Voice No.	Voice Name
397	Arabic Kit
398	SFX Kit 1
399	SFX Kit 2
400	Sound Effect Kit

* When you select a Voice of the DUAL category, two voices sound at the same time.

Drum Kit List

- " " indicates that the drum sound is the same as "Standard Kit 1".
- Each percussion voice uses one note.

		Voice No.	385	386	387	388	389	390
		Keyboard	Standard Kit 1	Standard Kit 2	Room Kit	Rock Kit	Electronic Kit	Analog Kit
		Note#	Note					
		25	C# 0	Surdo Mute				
		26	D 0	Surdo Open				
		27	D# 0	Hi Q				
		28	E 0	Whip Slap				
		29	F 0	Scratch H				
		30	F# 0	Scratch L				
		31	G 0	Finger Snap				
		32	G# 0	Click Noise				
		33	A 0	Metronome Click				
		34	A# 0	Metronome Bell				
		35	B 0	Seq Click L				
		36	C 1	Seq Click H				
C1	C#1	37	C# 1	Brush Tap				
D1	D#1	38	D 1	Brush Swirl				
E1	E 1	39	D# 1	Brush Slap				
		40	E 1	Brush Tap Swirl			Reverse Cymbal	Reverse Cymbal
F1	F 1	41	F 1	Snare Roll				
		42	F# 1	Castanet			Hi Q 2	Hi Q 2
G1	G 1	43	G 1	Snare Soft	Snare Soft 2	Snare Noisy	Snare Snappy Electronic	Snare Noisy 4
		44	G# 1	Sticks				
A1	A 1	45	A 1	Bass Drum Soft			Bass Drum H	Bass Drum H
		46	A# 1	Open Rim Shot	Open Rim Shot 2			
B1	B 1	47	B 1	Bass Drum Hard		Bass Drum H	Bass Drum Rock	Bass Drum Analog L
C2	C 2	48	C 2	Bass Drum	Bass Drum 2	Bass Drum Rock	Bass Drum Gate	Bass Drum Analog H
		49	C# 2	Side Stick				Side Stick Analog
D2	D 2	50	D 2	Snare	Snare 2	Snare Room L	Snare Rock	Snare Analog 1
E2	D#2	51	D# 2	Hand Clap				
		52	E 2	Snare Tight	Snare Tight 2	Snare Room H	Snare Rock Rim	Snare Noisy 3
F2	F 2	53	F 2	Floor Tom L	Tom Room 1	Tom Rock 1	Tom Electronic 1	Tom Analog 2
		54	F# 2	Hi-Hat Closed				Hi-Hat Close Analog 1
G2	G 2	55	G 2	Floor Tom H	Tom Room 2	Tom Rock 2	Tom Electronic 2	Tom Analog 2
		56	G# 2	Hi-Hat Pedal				Hi-Hat Close Analog 2
A2	A 2	57	A 2	Low Tom	Tom Room 3	Tom Rock 3	Tom Electronic 3	Tom Analog 3
		58	A# 2	Hi-Hat Open				Hi-Hat Open Analog
B2	B 2	59	B 2	Mid Tom L	Tom Room 4	Tom Rock 4	Tom Electronic 4	Tom Analog 4
C3	C 3	60	C 3	Mid Tom H	Tom Room 5	Tom Rock 5	Tom Electronic 5	Tom Analog 5
		61	C# 3	Crash Cymbal 1				Cymbal Analog
D3	D 3	62	D 3	High Tom	Tom Room 6	Tom Rock 6	Tom Electronic 6	Tom Analog 6
		63	D# 3	Ride Cymbal 1				
E3	E 3	64	E 3	Chinese Cymbal				
F3	F 3	65	F 3	Ride Cymbal Cup				
		66	F# 3	Tambourine				
G3	G 3	67	G 3	Splash Cymbal				
		68	G# 3	Cowbell				Cowbell Analog
A3	A 3	69	A 3	Crash Cymbal 2				
B3	B 3	70	A# 3	Vibraslap				
		71	B 3	Ride Cymbal 2				
C4	C 4	72	C 4	Bongo H				
		73	C# 4	Bongo L				
D4	D 4	74	D 4	Conga H Mute				Conga Analog H
E4	D#4	75	D# 4	Conga H Open				Conga Analog M
		76	E 4	Conga L				Conga Analog L
F4	F 4	77	F 4	Timbale H				
		78	F# 4	Timbale L				
G4	G 4	79	G 4	Agogo H				
		80	G# 4	Agogo L				
A4	A 4	81	A 4	Cabasa				
		82	A# 4	Maracas				Maracas 2
B4	B 4	83	B 4	Samba Whistle H				
		84	C 5	Samba Whistle L				
C5	C# 5	85	C# 5	Guiro Short				
D5	D 5	86	D 5	Guiro Long				
		87	D# 5	Claves				Claves 2
E5	E 5	88	E 5	Wood Block H				
F5	F 5	89	F 5	Wood Block L				
		90	F# 5	Cuica Mute			Scratch H	Scratch H
G5	G 5	91	G 5	Cuica Open			Scratch L	Scratch L
		92	G# 5	Triangle Mute				
A5	A 5	93	A 5	Triangle Open				
		94	A# 5	Shaker				
B5	B 5	95	B 5	Jingle Bells				
		96	C 6	Bell Tree				
C6	C# 6	97	C# 6					
		98	D 6					
		99	D# 6					
		100	E 6					
		101	F 6					
		102	F# 6					
		103	G 6					

Voice No.		391	392	393	394	395
Keyboard		Dance Kit	Jazz Kit	Brush Kit	Symphony Kit	StdKit1 + Chinese Perc.
Note#	Note					
	25	C# 0				
	26	D 0				
	27	D# 0				
	28	E 0				
	29	F 0				
	30	F# 0				
	31	G 0				
	32	G# 0				
	33	A 0				
	34	A# 0				
	35	B 0				
	36	C 1				
C1	C#1					
D1	D#1					
E1	E 1	Reverse Cymbal				
F1	F 1					
	42	F# 1	Hi Q 2			
G1	G 1	Snare Techno		Brush Slap 2		
	44	G# 1				
A1	A 1	Kick Techno Q			Bass Drum Soft L	
	46	A# 1	Rim Gate			
B1	B 1	Kick Techno L			Gran Cassa	
C2	C 2	Kick Techno	Bass Drum Jazz	Bass Drum Jazz	Gran Cassa Mute	
	49	C# 2	Side Stick Analog			
D2	D 2	Snare Clap				
	50	D# 2				
E2	E 2	Snare Dry	Snare Jazz M	Brush Tap	Band Snare 2	
F2	F 2	Tom Analog 1	Tom Jazz 1	Tom Brush 1	Tom Jazz 1	
	54	F# 2	Hi-Hat Close Analog 3			
G2	G 2	Tom Analog 2	Tom Jazz 2	Tom Brush 2	Tom Jazz 2	
	56	G# 2	Hi-Hat Close Analog 4			
A2	A 2	Tom Analog 3	Tom Jazz 3	Tom Brush 3	Tom Jazz 3	
	58	A# 2	Hi-Hat Open Analog 2			
B2	B 2	Tom Analog 4	Tom Jazz 4	Tom Brush 4	Tom Jazz 4	
C3	C 3	Tom Analog 5	Tom Jazz 5	Tom Brush 5	Tom Jazz 5	
	61	C# 3	Cymbal Analog		Hand Cymbal 1	
D3	D 3	Tom Analog 6	Tom Jazz 6	Tom Brush 6	Tom Jazz 6	
	63	D# 3			Hand Cymbal 1 Short	
E3	E 3					
	64	E 3				
F3	F 3					
	66	F# 3				
G3	G 3					
	68	G# 3	Cowbell Analog			
A3	A 3				Hand Cymbal 2	
	70	A# 3				
B3	B 3				Hand Cymbal 2 Short	
	72	C 4				
C4	C#4					
	74	D 4	Conga Analog H			
D4	D#4		Conga Analog M			
E4	E 4		Conga Analog L			
	76	E 4				
F4	F 4					
	78	F# 4				
G4	G 4					Dagu Mute
	80	G# 4				Zhongcha Mute
A4	A 4					Dagu Heavy
	82	A# 4	Maracas 2			Zhongcha Open
B4	B 4					Paigu Middle
	84	C 5				Paigu Low
C5	C#5					Xiaocha Mute
	85	C# 5				Bangu
D5	D 5					Xiaocha Open
	87	D# 5	Claves 2			Bangzi
E5	E 5					Muyu Low
	89	F 5				Zhongluo Mute
F5	F#5		Scratch H			Muyu Mid-Low
	90	F# 5	Scratch L			Zhongluo Open
G5	G 5					Muyu Middle
	92	G# 5				Zhongluo Open
A5	A 5					Muyu Middle
	93	A 5				Xiaoluo Open
B5	A#5					Triangle Mute
	94	A# 5				Triangle Open
	95	B 5				
	96	C 6				
C6	C#6					
	97	C# 6				
	98	D 6				
	99	D# 6				
	100	E 6				
	101	F 6				
	102	F# 6				
	103	G 6				

Drum Kit List

Voice No.		396	397	398	399	400
Keyboard		Indian Kit	Arabic Kit	SFX Kit 1	SFX Kit 2	Sound Effect Kit
Note#	Note					
	25	C# 0	Zarb Back mf			
	26	D 0	Zarb Tom f			
	27	D# 0	Indian Hand Clap	Zarb Eshareh		
	28	E 0	Dafli Open	Zarb Whipping		
	29	F 0	Dafli Slap	Tombak Tom f		
	30	F# 0	Dafli Rim	Neghareh Tom f		
	31	G 0	Duff Open	Tombak Back f		
	32	G# 0	Duff Slap	Neghareh Back f		
	33	A 0	Duff Rim	Tombak Snap f		
	34	A# 0	Hatheli Long	Neghareh Pelang f		
	35	B 0	Hatheli Short	Tombak Trill		
	36	C 1	Baya ge	Khaligi Clap 1	Cutting Noise 1	Phone Call
	37	C# 1	Baya ke	Arabic Zalgouta Open	Cutting Noise 2	Door Squeak
	38	D 1	Baya ghe	Khaligi Clap 2		Door Slam
	39	D# 1	Baya ka	Arabic Zalgouta Close	String Slap	Scratch Cut
	40	E 1	Tabla na	Arabic Hand Clap		Scratch
	41	F 1	Tabla tin	Tabel Tak 1		Wind Chime
	42	F# 1	Tablabaya dha	Sagat 1		Telephone Ring
	43	G 1	Dhol 1 Open	Tabel Dom		
	44	G# 1	Dhol 1 Slap	Sagat 2		
	45	A 1	Dhol 1 Mute	Tabel Tak 2		
	46	A# 1	Dhol 1 Open Slap	Sagat 3		
	47	B 1	Dhol 1 Roll	Riq Tik 3		
	48	C 2	Dandia Short	Riq Tik 2		Heartbeat
	49	C# 2	Dandia Long	Riq Tik Hard 1		Footsteps
	50	D 2	Chutki	Riq Tik 1		Door Squeak
	51	D# 2	Chupri	Riq Tik Hard 2		Door Slam
	52	E 2	Khanjira Open	Riq Tik Hard 3	Flute Key Click	Car Engine Ignition
	53	F 2	Khanjira Slap	Riq Tish		Car Tires Squeal
	54	F# 2	Khanjira Mute	Riq Snouj 2		Camera
	55	G 2	Khanjira Bendup	Riq Roll		Car Passing
	56	G# 2	Khanjira Benddown	Riq Snouj 1		Car Crash
	57	A 2	Dholak 1 Open	Riq Sak		Hiccup
	58	A# 2	Dholak 1 Mute	Riq Snouj 3		Siren
	59	B 2	Dholak 1 Slap	Riq Snouj 4		Train
	60	C 3	Dhol 2 Open	Riq Tik Hard 3		Jet Plane
	61	C# 3	Dhol 2 Slap	Riq Brass 1		Starship
	62	D 3	Dhol 2 Rim	Riq Brass 2		Burst
	63	D# 3	Mridangam na	Riq Brass 2		Roller Coaster
	64	E 3	Mridangam din	Riq Dom		Submarine
	65	F 3	Mridangam ki	Katem Tak Doff		Owl
	66	F# 3	Mridangam ta	Katem Dom		Horse Gallop
	67	G 3	Mridangam Chapu	Katem Sak 1		Horse Neigh
	68	G# 3	Mridangam Lo Closed	Katem Tak 1	Shower	Cow
	69	A 3	Mridangam Lo Open	Katem Sak 2	Thunder	Scratch
	70	A# 3	Chimta Normal	Katem Tak 2	Wind	Laugh
	71	B 3	Chimta Ring	Daholla Sak 2	Stream	Scream
	72	C 4	Dholki Hi Open	Daholla Sak 1	Bubble	Punch
	73	C# 4	Dholki Hi Mute	Daholla Tak 1	Feed	Heartbeat
	74	D 4	Dholki Lo Open	Daholla Dom		Footsteps
	75	D# 4	Dholki Hi Slap	Daholla Tak 2		Whoow!
	76	E 4	Dholki Lo Slide	Tablah Prok		
	77	F 4	Khol Open	Tablah Dom 2		
	78	F# 4	Khol Slide	Tablah Roll of Edge		
	79	G 4	Khol Mute	Tablah Tak Finger 4		
	80	G# 4	Manjira Open	Tablah Tak Trill 1		
	81	A 4	Manjira Close	Tablah Tak Finger 3		
	82	A# 4	Jhanji Open	Tablah Tak Trill 2		
	83	B 4	Jhanji Close	Tablah Tak Finger 2		
	84	C 5	Mondira Open	Tablah Tak Finger 1	Dog	
	85	C# 5	Mondira Close	Tablah Tik 2	Horse	Machine Gun
	86	D 5	Indian Bhangra Scat 1	Tablah Tik 4	Bird Tweet	Laser Gun
	87	D# 5	Indian Bhangra Scat 2	Tablah Tik 3		Explosion
	88	E 5	Indian Bhangra Scat 3	Tablah Tik 1		Firework
	89	F 5	Indian Bhangra Scat 4	Tablah Tak 3		
	90	F# 5	Khomokh Normal	Tablah Tak 1		
	91	G 5	Khomokh Mute	Tablah Tak Finger 2	Maou	
	92	G# 5	Khomokh Mittak	Tablah Tak 2		
	93	A 5	Thavil Open	Tablah Sak 2		
	94	A# 5	Thavil Slap	Tablah Tremolo		
	95	B 5	Thavil Mute	Tablah Sak 1		
	96	C 6	Khartaal	Tablah Dom 1		
	97	C# 6	Dholak 2 Open			
	98	D 6	Dholak 2 Slide			
	99	D# 6	Dholak 2 Rim 1			
	100	E 6	Dholak 2 Rim 2			
	101	F 6	Dholak 2 Ring			
	102	F# 6	Dholak 2 Slap			
	103	G 6				

C1
C#1
D1
D#1
E1
E
F1
F#1
G1
G#1
A1
A#1
B1
C2
C#2
D2
D#2
E2
F2
F#2
G2
G#2
A2
A#2
B2
C3
C#3
D3
D#3
E3
F3
F#3
G3
G#3
A3
A#3
B3
C4
C#4
D4
D#4
E4
F4
F#4
G4
G#4
A4
A#4
B4
C5
C#5
D5
D#5
E5
F5
F#5
G5
G#5
A5
A#5
B5
C6

Drum Loop

Heartbeat

Footsteps

Door Squeak

Door Slam

Applause

Camera

Horn

Hiccup

Cuckoo Clock

Stream

Frog

Rooster

Dog

Cat

Owl

Horse Gallop

Horse Neigh

Cow

Lion

Scratch

Yo!

Go!

Get up!

Whoow!

Huuuah!

Uhi+Hit

Song List

Song No.	Song Name
Top Picks	
001	Demo 1
002	Demo 2
003	Demo 3
Favorite	
004	Frère Jacques
005	Der Froschgesang
006	Aura Lee
007	London Bridge
008	Sur le pont d'Avignon
009	Nedelka
010	Aloha Oe
011	Sippin' Cider Through a Straw
012	Old Folks at Home
013	Bury Me Not on the Lone Prairie
014	Cielito Lindo
015	Santa Lucia
016	If You're Happy and You Know It
017	Beautiful Dreamer
018	Greensleeves
019	Kalinka
020	Holdilia Cook
021	Ring de Banjo
022	La Cucaracha
023	Funiculi Funicula
024	Largo (from the New World)
025	Brahms' Lullaby
026	Liebesträume Nr.3
027	Pomp and Circumstance
028	Chanson du Toreador
029	Jupiter, the Bringer of Jollity
030	The Polovetsian Dances
031	Die Moldau
032	Salut d'Amour op.12
033	Humoresques
034	Symphony No.9 (from the New World - 4th movement)
Instrument Master	
035	Sicilienne/Fauré
036	Swan Lake
037	Grand March (Aida)
038	Serenade for Strings in C major, op.48
039	Pizzicato Polka
040	Romance de Amor
041	Menuett BWV. Anh.114
042	Ave Verum Corpus
Duet	
043	Ten Little Indians (DUET)
044	The Cuckoo (DUET)
045	Close Your Hands, Open Your Hands (DUET)
046	O du lieber Augustin (DUET)
047	We Wish You A Merry Christmas (DUET)
048	London Bridge (DUET)
049	Scarborough Fair (DUET)
050	Twinkle Twinkle Little Star (DUET)
051	Im Mai (DUET)
052	O Christmas Tree (DUET)
053	Pop Goes The Weasel (DUET)
054	Mary Had a Little Lamb (DUET)
055	Row Row Row Your Boat (DUET)
056	On Top of Old Smoky (DUET)
Favorite with Style	
057	Amazing Grace
058	Oh! Susanna
059	Joy to the World

Song No.	Song Name
060	Little Brown Jug
061	Yankee Doodle
062	My Darling Clementine
063	Auld Lang Syne
064	My Bonnie
065	When the Saints Go Marching In
066	The Danube Waves
067	Battle Hymn of the Republic
068	I've Been Working On The Railroad
069	Grandfather's Clock
070	Bill Bailey (Won't You Please Come Home)
071	Down by the Riverside
072	Camptown Races
073	When Irish Eyes Are Smiling
074	Ave Maria
075	American Patrol
076	Valse Des Fleurs (From "The Nutcracker")
077	Frühlingsstimmen
Piano Repertoire	
078	Wenn ich ein Vöglein wär
079	Die Lorelei
080	Home Sweet Home
081	Scarborough Fair
082	My Old Kentucky Home
083	Loch Lomond
084	Silent Night
085	Deck the Halls
086	O Christmas Tree
087	Sonata Pathétique 2nd Adagio Cantabile
088	Ave Maria/J. S. Bach - Gounod
089	Jesus bleibet meine Freude
090	Prelude op.28-15 "Raindrop"
091	Nocturne op.9-2
092	Etude op.10-3 "Chanson de L'adieu"
093	Romanze (Serenade K.525)
094	Arabesque
095	La Chevaleresque
096	Für Elise
097	Turkish March
098	24 Preludes op.28-7
099	Annie Laurie
100	Jeanie with the Light Brown Hair

Song No.	Special Appendix
Chord Study	
101-112	Chord Study 01-Chord Study 12

- Some songs have been edited for length or for ease in learning, and may not be exactly the same as the original.
- A song book (free downloadable scores) is available that includes scores for all internal songs (excepting Songs 1-3). To obtain the Song Book, complete the user registration at the following website.
<https://member.yamaha.com/myproduct/regist/>

Style List

Style No.	Style Name
8Beat	
1	BritPopRock
2	8BeatModern
3	Cool8Beat
4	60sGuitarPop
5	8BeatAdria
6	60s8Beat
7	8Beat
8	OffBeat
9	60sRock
10	HardRock
11	RockShuffle
12	8BeatRock
16Beat	
13	16Beat
14	PopShuffle
15	GuitarPop
16	16BeatUptempo
17	KoolShuffle
18	HipHopLight
Ballad	
19	70sGlamPiano
20	PianoBallad
21	LoveSong
22	6/8ModernEP
23	6/8SlowRock
24	OrganBallad
25	PopBallad
26	16BeatBallad
Dance	
27	EuroTrance
28	Ibiza
29	SwingHouse
30	Clubdance
31	ClubLatin
32	Garage 1
33	Garage 2
34	TechnoParty
35	UKPop
36	HipHopGroove
37	HipShuffle
38	HipHopPop
Disco	
39	70sDisco
40	LatinDisco
41	SaturdayNight
42	DiscoHands
Swing&Jazz	
43	BigBandFast
44	BigBandBallad
45	JazzClub
46	Swing 1
47	Swing 2
48	Five/Four
49	Dixieland
50	Ragtime
R&B	
51	Soul
52	DetroitPop

Style No.	Style Name
53	6/8Soul
54	CrocoTwist
55	Rock&Roll
56	ComboBoogie
57	6/8Blues
Country	
58	CountryPop
59	CountrySwing
60	Country2/4
61	Bluegrass
Latin	
62	BrazilianSamba
63	BossaNova
64	Forro
65	Sertanejo
66	Joropo
67	Parranda
68	Reggaeton
69	Tijuana
70	PasoDuranguense
71	CumbiaGrupera
72	Mambo
73	Salsa
74	Beguine
75	Reggae
World	
76	ScottishReel
77	Saeidy
78	WehdaSaghira
79	IranianElec
80	Emarati
81	IndianPop
82	Bhangra
83	Bhajan
84	BollyMix
85	Tamil
86	Kerala
87	GoanPop
88	Rajasthan
89	Dandiya
90	Qawwali
91	FolkHills
92	ModernDangdut
93	Keroncong
94	XiQingLuoGu
95	YiZuMinGe
96	JingJuJieZou
Ballroom	
97	VienneseWaltz
98	EnglishWaltz
99	Slowfox
100	Foxtrot
101	Quickstep
102	Tango
103	Pasodoble
104	Samba
105	ChaChaCha
106	Rumba
107	Jive

Style No.	Style Name
Traditional	
108	US March
109	6/8March
110	GermanMarch
111	PolkaPop
112	OberkainerPolka
113	Tarantella
114	Showtune
115	ChristmasSwing
116	ChristmasWaltz
Waltz	
117	ItalianWaltz
118	SwingWaltz
119	JazzWaltz
120	CountryWaltz
121	OberkainerWalzer
122	Musette
Pianist	
123	Stride
124	PianoSwing
125	Arpeggio
126	Habanera
127	SlowRock
128	8BeatPianoBallad
129	6/8PianoMarch
130	PianoWaltz

Effect Type List

Reverb Types

No.	Reverb Type	Description
01-03	Hall 1-3	Concert hall reverb.
04-05	Room 1-2	Small room reverb.
06-07	Stage 1-2	Reverb for solo instruments.
08-09	Plate 1-2	Simulated steel plate reverb.
10	Off	No effect.

Chorus Types

No.	Chorus Type	Description
1-3	Chorus 1-3	Conventional chorus program with rich, warm chorusing.
4-5	Flanger 1-2	This produces a rich, animated wavering effect in the sound.
6	Off	No effect.

Specifications

Product Name		Digital Keyboard	
Size/Weight	Dimensions (W x D x H)		940mm x 317mm x 106mm (37" x 12-1/2" x 4-3/16")
	Weight		4.0kg (not including batteries) (8lb 13oz)
Control Interface	Keyboard	Number of Keys	61
	Display	Type	LCD display
		Language	English
	Panel	Language	English
Voices	Tone Generation	Tone Generation Technology	AWM Stereo Sampling
	Polyphony	Number of Polyphony (max.)	32
	Preset	Number of Voices	384 Voices + 16 drum/SFX kits
Effects	Types	Reverb	9 types
		Chorus	5 types
		Master EQ	6 types
		Ultra-Wide Stereo	3 types
	Functions	Panel Sustain	Yes
Accompaniment Styles	Preset	Number of Styles	130
		Fingering	Multi finger
		Style Control	ACMP ON/OFF, SYNC START, START/STOP, INTRO/ENDING/rit, MAIN/AUTO FILL
	Other Features	One Touch Setting (OTS)	Yes
Songs (Audio not supported.)	Preset	Number of Preset Songs	112 (including Chord Study: 12)
	Recording	Number of Songs	1
		Number of Tracks	1
		Data Capacity	Approx. 300 notes
		Compatible Data Format	Original File Format
Function	Lesson	Yamaha Education Suite (YES)	[1 LISTEN & LEARN], [2 TIMING], [3 WAITING], [A-B REPEAT], [CHORD DICTIONARY]
	Overall Controls	Metronome	Yes
		Tempo Range	11–280
		Transpose	-12 to 0, 0 to +12
		Tuning	427.0–440.0–453.0 Hz (approx. 0.2Hz increments)
	Miscellaneous	Duo	Yes
		PIANO Button	Yes (Portable Grand Button)
Connectivity	DC IN		12V
	Headphones/Output		Standard stereo phone jack x 1
	Sustain Pedal		Yes
	AUX IN		Stereo mini jack
Sound System	Amplifiers		2.5W + 2.5W
	Speakers		12cm x 2
Power Supply	Power Supply	AC Adaptor	PA-130 or an equivalent recommended by Yamaha
		Batteries	Six 1.5V "AA" size alkaline (LR6), manganese (R6) or six 1.2V "AA" size Ni-MH rechargeable batteries (HR6)
	Power Consumption		6W (When using PA-130 AC adaptor)
Auto Power Off		Yes	
Included Accessories			<ul style="list-style-type: none"> • Owner's Manual • AC adaptor * (PA-130 or an equivalent recommended by Yamaha) • Music rest • Online Member Product Registration <p>* May not be included depending on your area. Please check with your Yamaha dealer.</p>
Separately Sold Accessories (May not be available depending on your area.)			<ul style="list-style-type: none"> • AC adaptor: Users within U.S or Europe: PA-130 or an equivalent recommended by Yamaha Others: PA-3C, PA-130 or an equivalent • Keyboard stand: L-2C • Headphones: HPH-50/HPH-100/HPH-150 • Footswitch: FC4A/FC5

* The contents of this manual apply to the latest specifications as of the publishing date. To obtain the latest manual, access the Yamaha website then download the manual file. Since specifications, equipment or separately sold accessories may not be the same in every locale, please check with your Yamaha dealer.

Index

- A**
A-B Repeat24
AC Adaptor12
ACMP18
Auto Accompaniment18
AUTO FILL19
Auto Power Off13, 32
AUX IN11
- B**
Backup33
Backup Clear33
Backup Parameter33
battery12
Battery Type32
Beat15
BGM23
- C**
Chord15
Chord Dictionary21
Chord Study26
Chord Type20
Chorus17
Chorus Type32, 43
- D**
Demo23
Demo Group32
Demo Play Mode32
Display15
Drum Kit List38
Duo22
- E**
Effect17, 32
Effect Type List43
ENDING19
EQ Setting30
EQ type30
- F**
Fast Forward24
Fast Reverse24
Footswitch14
Function31
Function List31
- G**
Grade27
Grand Piano16
- H**
Harmony Volume32
Headphone14
- I**
Initialization33
INTRO19
- K**
Keyboard Display15
- L**
Lesson27
- M**
MAIN19
Master EQ Type32
Measure15
Metronome17
Metronome Volume17, 32
Music Rest8, 14
- N**
Notation15
- O**
One Touch Setting16
- P**
Panel Sustain17, 32
Part25
Pause24
Phrase Recording29
Playback23
Power Requirements12
- R**
Random23
Reverb17
Reverb Level32
Reverb Type32, 43
rhythm18
rit.19
- S**
Section19
Song23
Song Book8
Song List41
Song Volume23, 31
Specifications44
Split Point18, 31
Style18
Style List42
Style Volume18, 31
SUSTAIN14
Sustain17, 22, 32
Synchro Start18
- T**
Tap19
Tempo17, 19
Time Signature17, 32
Timing27
Transpose31
Troubleshooting34
Tuning31
- U**
Ultra-Wide Stereo17
- V**
Voice16
Voice List35
volume (master)13
volume (Song)23, 31
volume (Style)18, 31
volume (Voice)31
- W**
Waiting27
Wide Type32
- Y**
Your Tempo32



LIMITED 1-YEAR WARRANTY ON PORTABLE KEYBOARDS

(NP, PSRE, PSREW, PSRF, EZ, DGX230, DGX530, YPG AND YPT SERIES)

Thank you for selecting a Yamaha product. Yamaha products are designed and manufactured to provide a high level of defect-free performance. Yamaha Corporation of America ("Yamaha") is proud of the experience and craftsmanship that goes into each and every Yamaha product. Yamaha sells its products through a network of reputable, specially authorized dealers and is pleased to offer you, the Original Owner, the following Limited Warranty, which applies only to products that have been (1) directly purchased from Yamaha's authorized dealers in the fifty states of the USA and District of Columbia (the "Warranted Area") and (2) used exclusively in the Warranted Area. Yamaha suggests that you read the Limited Warranty thoroughly, and invites you to contact your authorized Yamaha dealer or Yamaha Customer Service if you have any questions.

Coverage: Yamaha will, at its option, repair or replace the product covered by this warranty if it becomes defective, malfunctions or otherwise fails to conform with this warranty under normal use and service during the term of this warranty, without charge for labor or materials. Repairs may be performed using new or refurbished parts that meet or exceed Yamaha specifications for new parts. If Yamaha elects to replace the product, the replacement may be a reconditioned unit. You will be responsible for any installation or removal charges and for any initial shipping charges if the product(s) must be shipped for warranty service. However, Yamaha will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty. This warranty does not cover (a) damage, deterioration or malfunction resulting from accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions according to the Owner's Manual for this product; any shipment of the product (claims must be presented to the carrier); repair or attempted repair by anyone other than Yamaha or an authorized Yamaha Service Center; (b) any unit which has been altered or on which the serial number has been defaced, modified or removed; (c) normal wear and any periodic maintenance; (d) deterioration due to perspiration, corrosive atmosphere or other external causes such as extremes in temperature or humidity; (e) damages attributable to power line surge or related electrical abnormalities, lightning damage or acts of God; or (f) RFI/EMI (Interference/noise) caused by improper grounding or the improper use of either certified or uncertified equipment, if applicable. Any evidence of alteration, erasing or forgery of proof-of-purchase documents will cause this warranty to be void. This warranty covers only the Original Owner and is not transferable.

In Order to Obtain Warranty Service: Warranty service will only be provided for defective products within the Warranted Area. Contact your local authorized Yamaha dealer who will advise you of the procedures to be followed. If this is not successful, contact Yamaha at the address, telephone number or website shown below. Yamaha may request that you send the defective product to a local authorized Yamaha Servicer or authorize return of the defective product to Yamaha for repair. If you are uncertain as to whether a dealer has been authorized by Yamaha, please contact Yamaha's Service Department at the number shown below, or check Yamaha's website at www.Yamaha.com. Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, together with the original or a machine reproduction of the bill of sale or other dated, proof-of-purchase document describing the product, as evidence of warranty coverage. Should any product submitted for warranty service be found ineligible therefore, an estimate of repair cost will be furnished and the repair will be accomplished only if requested by you and upon receipt of payment or acceptable arrangement for payment.

Limitation of Implied Warranties and Exclusion of Damages: ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE APPLICABLE PERIOD OF TIME SET FORTH ABOVE. YAMAHA SHALL NOT BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE OR INTERRUPTION OF PERFORMANCES OR ANY CONSEQUENCES. YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT YAMAHA'S OPTION. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is the only express warranty applicable to the product specified herein; Yamaha neither assumes nor authorizes anyone to assume for it any other express warranty.

If you have any questions about service received or if you need assistance in locating an authorized Yamaha Servicer, please contact:



CUSTOMER SERVICE

Yamaha Corporation of America

6600 Orangethorpe Avenue, Buena Park, California 90620-1373

Telephone: 800-854-1569

www.yamaha.com

Do not return any product to the above address without a written Return Authorization issued by YAMAHA.

© 2015 Yamaha Corporation of America.

For details of products, please contact your nearest Yamaha representative or the authorized distributor listed below.

NORTH AMERICA

CANADA

Yamaha Canada Music Ltd.
135 Milner Avenue, Toronto, Ontario M1S 3R1,
Canada
Tel: +1-416-298-1311

U.S.A.

Yamaha Corporation of America
6600 Orangethorpe Avenue, Buena Park, CA 90620,
U.S.A.
Tel: +1-714-522-9011

CENTRAL & SOUTH AMERICA

MEXICO

Yamaha de México, S.A. de C.V.
Av. Insurgentes Sur 1647 Piso 9, Col. San José
Insurgentes, Delegación Benito Juárez, México,
D.F., C.P. 03900
Tel: +52-55-5804-0600

BRAZIL

Yamaha Musical do Brasil Ltda.
Rua Fidêncio Ramos, 302 - Cj 52 e 54 - Torre B -
Vila Olímpia - CEP 04551-010 - São Paulo/SP,
Brazil
Tel: +55-11-3704-1377

ARGENTINA

Yamaha Music Latin America, S.A.,
Sucursal Argentina
Olga Cossetini 1553, Piso 4 Norte,
Madero Este-C1107CEK,
Buenos Aires, Argentina
Tel: +54-11-4119-7000

PANAMA AND OTHER LATIN

AMERICAN COUNTRIES/

CARIBBEAN COUNTRIES

Yamaha Music Latin America, S.A.
Edif. Torre Banco General, F7, Urb. Marbella,
Calle 47 y Aquilino de la Guardia, Panama,
P.O.Box 0823-05863, Panama, Rep.de Panama
Tel: +507-269-5311

EUROPE

THE UNITED KINGDOM/IRELAND

Yamaha Music Europe GmbH (UK)
Sherbourne Drive, Tilbrook, Milton Keynes,
MK7 8BL, U.K.
Tel: +44-1908-366700

GERMANY

Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

SWITZERLAND/LIECHTENSTEIN

Yamaha Music Europe GmbH, Branch
Switzerland in Thalwil
Seestrasse 18a, 8800 Thalwil, Switzerland
Tel: +41-44-3878080

AUSTRIA

Yamaha Music Europe GmbH, Branch Austria
Schleiergasse 20, 1100 Wien, Austria
Tel: +43-1-60203900

CZECH REPUBLIC/HUNGARY/

ROMANIA/SLOVAKIA/SLOVENIA

Yamaha Music Europe GmbH, Branch Austria
Schleiergasse 20, 1100 Wien, Austria
Tel: +43-1-60203900

POLAND/LITHUANIA/LATVIA/

ESTONIA

Yamaha Music Europe GmbH
Sp.z o.o. Oddział w Polsce
ul. Wielicka 52, 02-657 Warszawa, Poland
Tel: +48-22-880-08-88

BULGARIA

Dinacord Bulgaria LTD.
Bul. Iskarsko Schose 7 Targoviski Zentar Evropa
1528 Sofia, Bulgaria
Tel: +359-2-978-20-25

MALTA

Olimpus Music Ltd.
Valletta Road, Mosta MST9010, Malta
Tel: +356-2133-2093

NETHERLANDS/BELGIUM/

LUXEMBOURG

Yamaha Music Europe, Branch Benelux
Clarissenhof 5b, 4133 AB Vianen, The Netherlands
Tel: +31-347-358040

FRANCE

Yamaha Music Europe
7 rue Ambroise Croizat, Zone d'activités de Pariest,
77183 Croissy-Beaubourg, France
Tel: +33-1-6461-4000

ITALY

Yamaha Music Europe GmbH, Branch Italy
Via Tinelli N.67/69 20855 Gerno di Lesmo (MB),
Italy
Tel: +39-039-9065-1

SPAIN/PORTUGAL

Yamaha Music Europe GmbH Ibérica, Sucursal en España
Ctra. de la Coruna km. 17,200, 28231
Las Rozas de Madrid, Spain
Tel: +34-91-639-88-88

GREECE

Philippos Nakas S.A. The Music House
19th klm. Leof. Lavriou 190 02 Peania - Attiki,
Greece
Tel: +30-210-6686260

SWEDEN

Yamaha Music Europe GmbH Germany filial
Scandinavien
JA Wettergrensgata 1, 400 43 Göteborg, Sweden
Tel: +46-31-89-34-00

DENMARK

Yamaha Music Denmark,
Filial of Yamaha Music Europe GmbH, Tyskland
Generatorvej 8C, ST. TH., 2860 Soborg, Denmark
Tel: +45-44-92-49-00

FINLAND

F-Musikkil Oy
Antaksentie 4
FI-01510 Vantaa, Finland
Tel: +358 (0)96185111

NORWAY

Yamaha Music Europe GmbH Germany -
Norwegian Branch
Grini Neeringsgata 1, 1332 Østerås, Norway
Tel: +47-6716-7800

ICELAND

Hjódafurhusid Ehf.
Sidulfarna 20
IS-108 Reykjavik, Iceland
Tel: +354-525-5050

CROATIA

Euro Unit D.O.O.
Slakovec 73
40305 Nedelice
Tel: +38540829400

RUSSIA

Yamaha Music (Russia) LLC.
Room 37, entrance 7, bld. 7, Kievskaya street,
Moscow, 121059, Russia
Tel: +7-495-626-5005

OTHER EUROPEAN COUNTRIES

Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0

AFRICA

Yamaha Music Gulf FZE
JAFZA-16, Office 512, P.O.Box 17328,
Jebel Ali FZE, Dubai, UAE
Tel: +971-4-801-1500

MIDDLE EAST

TURKEY

Yamaha Music Europe GmbH
Merkezi Almanya Türkiye İstanbul Şubesi
Maslak Meydan Sokak, Spring Giz Plaza Bagimsiz
Böl. No:3, Sarıyer İstanbul, Turkey
Tel: +90-212-999-8010

CYPRUS

Nakas Music Cyprus Ltd.
Nikis Ave 2k
1086 Nicosia
Tel: + 357-22-511080

Major Music Center
21 Ali Riza Ave. Ortakoy
P.O.Box 475 Nicosia, Cyprus
Tel: (392) 227 9213

OTHER COUNTRIES

Yamaha Music Gulf FZE
JAFZA-16, Office 512, P.O.Box 17328,
Jebel Ali FZE, Dubai, UAE
Tel: +971-4-801-1500

ASIA

THE PEOPLE'S REPUBLIC OF CHINA

Yamaha Music & Electronics (China) Co., Ltd.
2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu,
Shanghai, China
Tel: +86-400-051-7700

HONG KONG

Tom Lee Music Co., Ltd.
11/F, Silvercord Tower 1, 30 Canton Road,
Tsimshatsui, Kowloon, Hong Kong
Tel: +852-2737-7688

INDIA

Yamaha Music India Private Limited
P-401, JMD Megapolis, Sector-48, Sohna Road,
Gurgaon-122018, Haryana, India
Tel: +91-124-485-3300

INDONESIA

PT. Yamaha Musik Indonesia (Distributor)
Yamaha Music Center Bldg. Jalan Jend. Gatot
Subroto Kav. 4, Jakarta 12930, Indonesia
Tel: +62-21-520-2577

KOREA

Yamaha Music Korea Ltd.
8F, Dongsung Bldg. 21, Teheran-ro 87-gil,
Gangnam-gu, Seoul, 06169, Korea
Tel: +82-2-3467-3300

MALAYSIA

Yamaha Music (Malaysia) Sdn. Bhd.
No.8, Jalan Perbandaran, Kelana Jaya, 47301
Petaling Jaya, Selangor, Malaysia
Tel: +60-3-78030900

SINGAPORE

Yamaha Music (Asia) Private Limited
Block 202 Hougang Street 21, #02-00,
Singapore 530202, Singapore
Tel: +65-6740-9200

TAIWAN

Yamaha Music & Electronics Taiwan Co., Ltd.
2F., No.1, Yuandong Rd. Bangiao Dist.
New Taipei City 22063, Taiwan, R.O.C.
Tel: +886-2-7741-8888

THAILAND

Siam Music Yamaha Co., Ltd.
3, 4, 15, 16th Fl, Siam Motors Building,
891/1 Rama 1 Road, Wangmai,
Pathumwan, Bangkok 10330, Thailand
Tel: +66-2215-2622

VIETNAM

Yamaha Music Vietnam Company Limited
15th Floor, Nam A Bank Tower, 201-203 Cach
Mang Thang Tam St., Ward 4, Dist.3,
Ho Chi Minh City, Vietnam
Tel: +84-8-3818-1122

OTHER ASIAN COUNTRIES

<http://asia.yamaha.com>

OCEANIA

AUSTRALIA

Yamaha Music Australia Pty. Ltd.
Level 1, 99 Queensbridge Street, Southbank,
VIC 3006, Australia
Tel: +61-3-9693-5111

NEW ZEALAND

Music Works LTD
P.O.BOX 6246 Wellesley, Auckland 4680,
New Zealand
Tel: +64-9-634-0099

COUNTRIES AND TRUST

TERRITORIES IN PACIFIC OCEAN

<http://asia.yamaha.com>

Yamaha Global Site
<https://www.yamaha.com/>

Yamaha Downloads
<http://download.yamaha.com/>

Manual Development Group
© 2016 Yamaha Corporation

Published 11/2016 POAP-A0
Printed in China

ZW03060