

**GKB-88 SLIM Size Chart**

Casio	PX110	PX-120	PX-130	PX-150	PX-200	PX-3	PX-300	PX-310	PX-320	PX-330
	PX-350	PX500L	PX-5S							
Clavia	NORD STAGE 88									
Korg	B1 Digital Piano	Pa1X PRO ELITE	S170s	SP170	SP-200	SP-300	TRITON EXTREME 76			
Kurzweil	SP2XS	SP54-8								
Roland	FP-4	FP4BK	FP4C-BK	FP4C-WT	FP-4F	FP4WH	FP-50	FP-7	FP-7F	
StudioLogic	SL 990XP	SL880PRO	SL-990PRO	VMK188	VMK-88+					
Yamaha	CP33	P-140	P-255	P-45	P-60	P-60S	P-70	P-85	P-95	